



## Programming Manual

### Label Printer

Foto Meramente Illustrativa



**LB-1000**

Programming Manual LB-1000

Part number: 501012560 - Revision 1.0

August/2012

Copyright © Bematech S. A.

All rights reserved.

No part of this publication may be copied, reproduced, adapted or translated without the prior written permission of Bematech S.A., except when allowed by patent rights.

Information in this publication is purely informative, subjected to change without notice and no liability is assumed with respect to its use.

However as product improvements become available, Bematech S.A. will make every effort to provide updated information for the products described in this publication. The latest version of this manual can be obtained through Bematech S.A. website:

[www.bematech.com](http://www.bematech.com)

Notwithstanding the other exceptions contained in this Manual, the consequences and responsibility are assumed by the Purchaser of this product or third parties as a result of: (a) intentional use for any improper, unintended or unauthorized applications of this product, including any particular purpose; (b) unauthorized modifications, repairs, or alterations to this product; (c) use of the product without complying with Bematech S.A. operating and maintenance instructions; (d) use of the product as component in systems or other applications in which the failure of this could create a situation where personal injury or material damages may occur. In the events described above, Bematech S.A. and its officers, administrators, employees, subsidiaries, affiliates and dealers shall not be held responsible or respond by any claim, costs, damages, losses, expenses and any other direct or indirect injury, as well as claims which alleges that Bematech S.A. was negligent regarding the design or manufacture of the product.

Bematech S.A. shall not be liable against any damages or problems arising from the use of any options or any consumable products other than those designated as original Bematech S.A. products or approved products by Bematech S.A.

Any product names or its logotypes mentioned in this publication may be trademarks of its respective owners and shall be here recognized.

Product warranties are only the ones expressly mentioned in the User's Manual. Bematech S.A. disclaims any and all implied warranties for the product, including but not limited to implied warranties of merchantability or fitness for a particular purpose. In addition, Bematech S.A. shall not be responsible or liable for a special, incidental or consequential damages or lost profits or savings arising from the use of the product by the Purchaser, the User or third parties

# Index

About the manual .....	V
Who should read this manual? .....	V
Other Publications Related .....	V
Document Conventions .....	VI
Object Position Calculation .....	VII
Printer Models List .....	IX
Setup and System Commands .....	1
• SIZE .....	1
• GAP .....	3
• GAPDETECT .....	5
• BLINEDECTECT .....	6
• AUTODETECT .....	7
• BLINE .....	8
• OFFSET .....	9
• SPEED .....	10
• DENSITY .....	11
• DIRECTION AND MIRROR IMAGE .....	12
• REFERENCE .....	14
• SHIFT .....	15
• COUNTRY .....	17
• CODEPAGE .....	18
• CLS .....	20
• FEED .....	21
• BACKFEED & BACKUP .....	22
• FORMFEED .....	23
• HOME .....	24
• PRINT .....	25
• SOUND .....	26
• CUT .....	27
• LIMITFEED .....	28
• SELFTEST .....	29
Label Formatting Commands .....	30
• BAR .....	30
• BARCODE .....	31
• BITMAP .....	36
• BOX .....	38
• CIRCLE .....	39
• DMATRIX .....	40
• ERASE .....	41
• MAXICODE .....	42
• PDF417 .....	44
• AZTEC .....	48
• PUTBMP .....	50
• PUTPCX .....	51
• QRCODE .....	52
• RSS .....	56
• REVERSE .....	59
• TEXT .....	60

Status Polling Commands (RS-232) .....	62
• <ESC>? .....	62
• <ESC>!R .....	63
• ~!@ .....	64
• ~!A .....	65
• ~!C .....	66
• ~!D .....	67
• ~!F .....	68
• ~!I .....	69
• ~!T .....	70
Message Translation Protocols .....	71
• ~# .....	71
Commands for Windows Driver .....	72
• !B .....	72
• !J .....	73
• !N .....	74
File Management Commands .....	75
• DOWNLOAD.....	75
• EOP .....	78
• FILES.....	79
• KILL .....	80
• MOVE .....	82
• RUN .....	83
BASIC Commands and Functions .....	84
• ABS() .....	84
• ASC() .....	85
• CHR\$().....	86
• END .....	87
• EOF().....	88
• OPEN.....	88
• WRITE .....	91
• READ.....	92
• SEEK.....	94
• LOF().....	95
• FREAD\$() .....	96
• FOR...NEXT LOOP .....	97
• IF...THEN...ELSE...ENDIF  LOOP.....	98
• GOSUB...RETURN .....	102
• GOTO .....	103
• INP\$().....	104
• INPUT .....	105
• REM.....	106
• OUT .....	107
• GETKEY().....	108
• INT().....	109
• LEFT\$().....	110
• LEN().....	111
• MID\$().....	112
• RIGHT\$() .....	113
• STR\$() .....	114
• STRCOMP ().....	115

• INSTR () .....	116
• TRIM\$() .....	117
• LTRIM\$() .....	118
• RTRIM\$() .....	119
• VAL() .....	120
• BEEP .....	121
• NOW\$() .....	122
• FORMAT\$() .....	123
Device Reconfiguration Commands .....	125
• SET COUNTER .....	125
• SET CUTTER .....	126
• SET PARTIAL_CUTTER .....	127
• SET BACK .....	129
• SET KEY1, SET KEY2, SET KEY3 .....	130
• SET LED1, SET LED2, SET LED3 .....	132
• SET PEEL .....	134
• SET TEAR & SET STRIPER .....	135
• SET GAP .....	136
• SET HEAD .....	138
• SET RIBBON .....	139
• SET COM1 .....	140
• SET PRINTKEY .....	141
• SET REPRINT .....	143
• PEEL .....	144
• LED1, LED2, LED3 .....	145
• KEY1, KEY2, KEY3 .....	146
Printer Global Variables .....	147
• @LABEL .....	147
• YEAR .....	148
• MONTH .....	149
• DATE .....	150
• WEEK .....	151
• HOUR .....	152
• MINUTE .....	153
• SECOND .....	154
• @YEAR .....	155
• @MONTH .....	156
• @DATE .....	157
• @DAY .....	158
• @HOUR .....	159
• @MINUTE .....	160
• @SECOND .....	161

## **About the manual**

This manual provides instructions on how to program Bematech's LB-1000 Label Printer.

## **Who should read this manual?**

This manual was developed either for technical and common users, in order to provide instructions on how to program the equipment.

## **Other Publications Related**

User Manual

Service Manual (exclusive for Technical Assistance)

## **Where to Find More Information?**

<http://www.bematech.com.br>


<http://www.bematech.com>

## Document Conventions

This manual uses the following typographic conventions.

Convention	Description
[expression list]	Items inside square brackets are optional, expression maximum length 2*1024 bytes;
<ESC>	ESCAPE (ASCII 27), control code of status polling command returns the printer status immediately.
~	(ASCII 126), control code of status polling command, returns the printer status only when the printer is ready.
Space	(ASCII 32) characters will be ignored in the command line.
"	(ASCII 34), beginning and ending of expression
CR,LF	(ASCII 13),(ASCII 10) denotes end of command line.
NULL	(ASCII 0) supported in the expression, except the 2D bar code commands.
<b>Note: 203 DPI: 1 mm = 8 dots</b>	Arial font in bold and italic type is used for note.


## Object Position Calculation

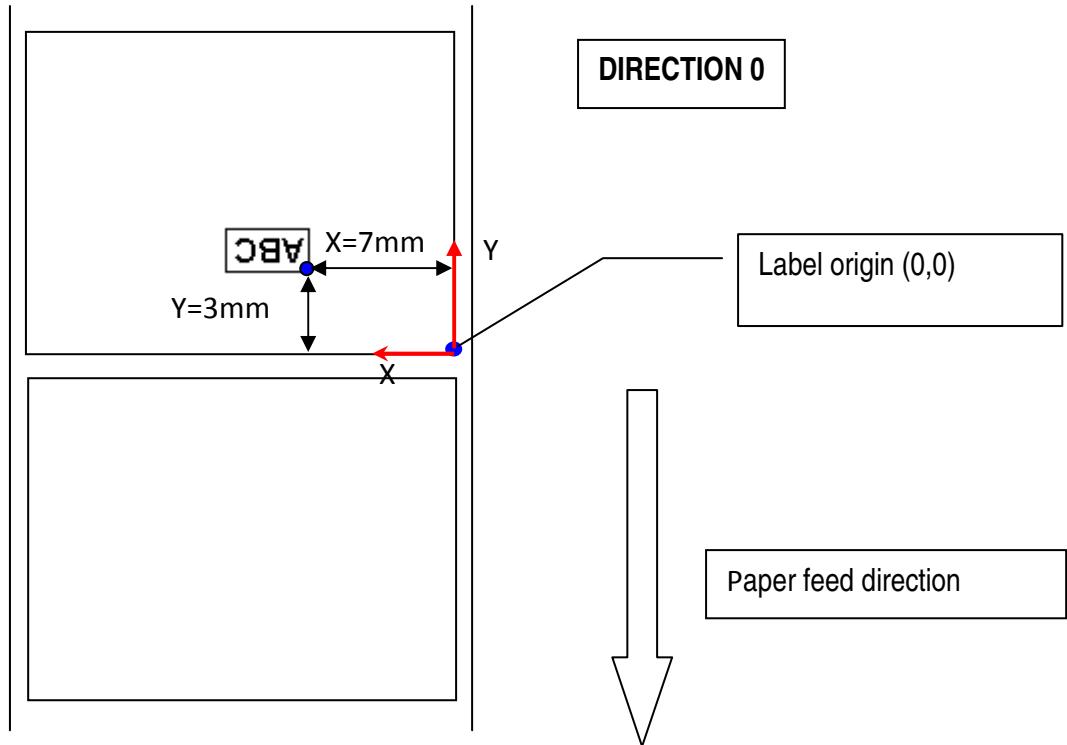


DIRECTION 0  
TEXT 56,24,"3",0,1,1,"ABC"

203 DPI, 1mm=8 dots  
300 DPI, 1mm=12 dots

Label origin (0,0)

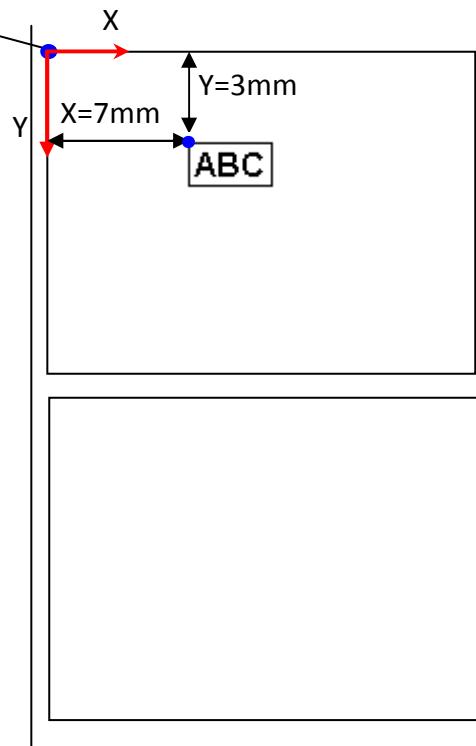

**DIRECTION 1**

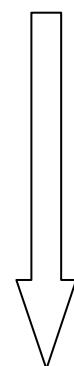

Paper feed direction

**DIRECTION 1**  
TEXT 56,24,"3",0,1,1,"ABC"

## **Printer Models List**

Series	Models
LB-1000	1. BASIC 2. ADVANCED

## Setup and System Commands

### ● SIZE

#### Description

This command defines the label width and length.

#### Syntax

English system (inch)

SIZE m,n

Metric system (mm)

SIZE m mm,n mm

Dot measurement

SIZE m dot,n dot

*This command is only supported in v6.27 and later firmware.*

<u>Parameter</u>	<u>Description</u>
m	Label width (inch or mm)
n	Label length (inch or mm)

#### Note :

**200 DPI : 1 mm = 8 dots**

**300 DPI : 1mm = 12 dots**

**For metric and dot systems, there must be a space between parameter and "mm" or "dot".**

Max. width	72mm	104mm	106mm	108mm	219.5mm
LB-1000		X			


#### Example

(1) English system (inch)

SIZE 3.5, 3.00

(2) Metric system (mm)

SIZE 100 mm, 100 mm

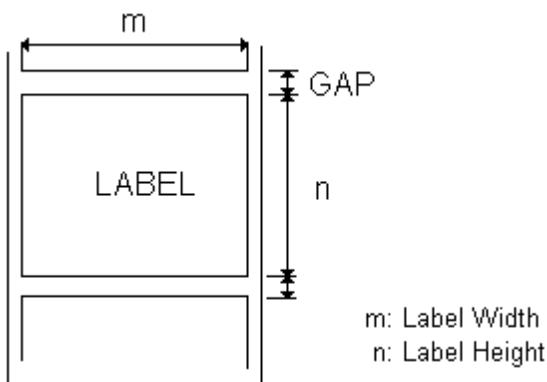

**See Also**

GAP, BLINE

## ● GAP

### Description

This command sets the distance between two labels.

### Syntax

English system (inch)

GAP m,n

Metric system (mm)

GAP m mm,n mm

#### Parameter

m

#### Description



The gap distance between two labels

$0 \leq m \leq 1$  (inch),  $0 \leq m \leq 25.4$  (mm)

n

The offset distance of the gap  $n \leq$  label length (inch or mm)

Continuous label.  
0,0

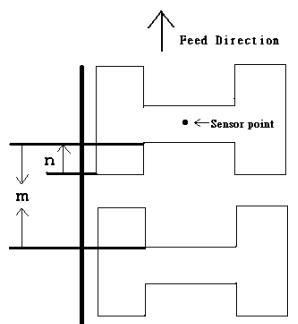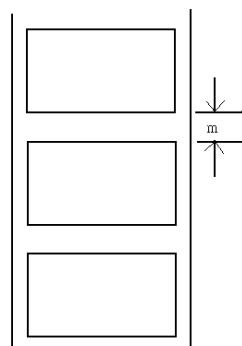

**Note:** For metric system, there must be a space between parameter and "mm".

When the sensor type is changed from "Black Mark" to "GAP", please send the

"GAP" command to the printer first.

Ex: In DOS mode,

```
C:\>copy con lpt1 <Enter>
GAP 2 mm,0 <Enter>
<Ctrl>+<Z> <Enter>
```

### Example

#### Normal gap

English system (inch)



GAP 0.12,0

Metric system (mm)

GAP 3 mm,0

Continuous label

GAP 0,0

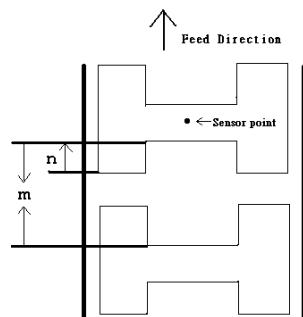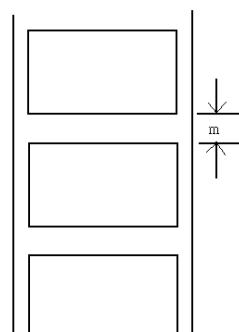

**Special gap**

English system (inch)

GAP 0.30, 0.10

Metric system (mm)

GAP 7.62 mm, 2.54 mm

**See Also**

SIZE, BLINE

## ● GAPDETECT

### Description

This command feeds the paper through the gap sensor in an effort to determine the paper and gap sizes, respectively. This command references the user's approximate measurements. If the measurements conflict with the actual size, the GAPDETECT command will not work properly. This calibration method can be applied to the labels with pre-printed logos or texts.

### Syntax

GAPDETECT [x, y]

<u>Parameter</u>	<u>Description</u>
x	Paper length (in dots)
y	Gap length (in dots)

*Note: If the x, y parameters are ignored then the printer will calibrate and determine the paper length and gap size automatically.*

### See Also

GAP, SIZE, BLINEDECTECT, AUTODETECT

## ● BLINDETECT

### Description

This command feeds the paper through the black mark sensor in an effort to determine the paper and black mark sizes, respectively. This command references the user's approximate measurements. If the measurements conflict with the actual size, the BLINDETECT command will not work properly. This calibration method can be applied to the labels with pre-printed logos or texts.

### Syntax

BLINDETECT [x, y]

<u>Parameter</u>	<u>Description</u>
x	Paper length (in dots)
y	Gap length (in dots)

*Note: If the x, y parameters are ignored then the printer will calibrate and determine the paper length and gap size automatically.*

### See Also

GAP, SIZE, GAPDETECT, AUTODETECT

## ● AUTODETECT

### Description

This command feeds the paper through the gap/black mark sensor in an effort to determine the paper and gap/black mark sizes, respectively. This command references the user's approximate measurements. If the measurements conflict with the actual size, the AUTODETECT command will not work properly. This calibration method can be applied to the labels with pre-printed logos or texts.

### Syntax

AUTODETECT [x, y]

<u>Parameter</u>	<u>Description</u>
x	Paper length (in dots)
y	Gap length (in dots)

#### *Note:*

- (1). *If the x, y parameters are ignored then the printer will calibrate and determine the paper length and gap/black mark size automatically.*
- (2). *When using this command, the printer will detect the label by the proper sensor type so please don't set the command GAP or BLINE in your program.*
- (3). *It is supported in firmware V6.86EZ or later.*

### See Also

GAP, SIZE, GAPDETECT, BLINDETECT

## ● BLINE

### Description

This command sets the height of the black line and the user-defined extra label feeding length each form feed takes.

### Syntax

English system (inch)

BLINE m,n

Metric system (mm)

BLINE m mm,n mm

#### Parameter

m

#### Description

The height of black line either in inch or mm.


$0 \leq m \leq 1$  (inch),  $0 \leq m \leq 25.4$  (mm)

n

The extra label feeding length.  $0 \leq n \leq$  label length

0,0

Continuous label.

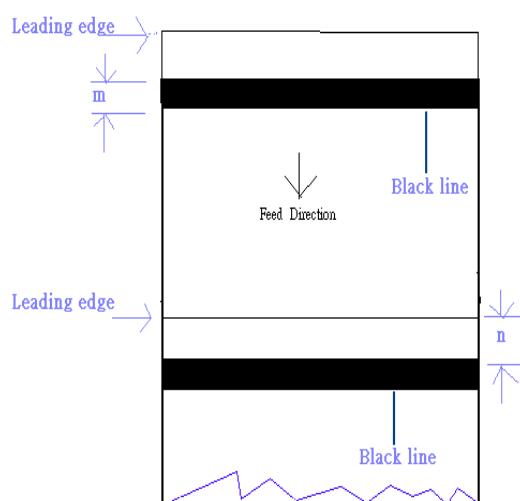

**Note:** For metric system, there must be a space between parameter and “mm”. When the sensor type is changed from “GAP” to “Black Mark”, please send the “BLINE” command to the printer first.

**Ex : In DOS mode,**

```
C :>copy con lpt1 <Enter>
      BLINE 2 mm,0 <Enter>
      <Ctrl>+<Z> <Enter>
```

### Example

English system (inch)

BLINE 0.20,0.50

Metric system (mm)

BLINE 5.08 mm,12.7 mm

### See Also

SIZE, GAP

## ● OFFSET

### Description

This command defines the selective, extra label feeding length each form feed takes, which, especially in peel-off mode and cutter mode, is used to adjust label stop position, so as for label to register at proper places for the intended purposes. The printer back tracks the extra feeding length before the next run of printing.

### Syntax

English system (inch)

OFFSET m

Metric system (mm)


OFFSET m mm

#### Parameter

m

#### Description

The offset distance (inch or mm).  $-1 \leq m \leq 1$ (inch)

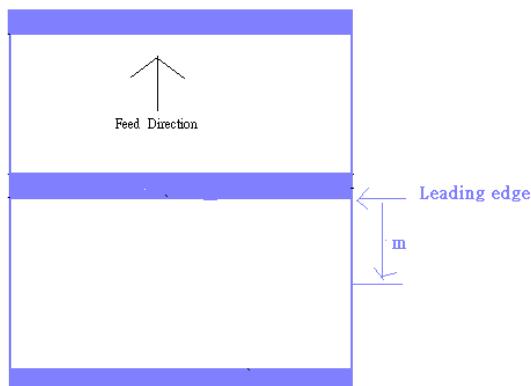

**CAUTION:** Improperly offset value may cause paper jam.

### Example

English system (inch)

OFFSET 0.5

Metric system (mm)

OFFSET 12.7 mm

### See Also

SIZE, GAP, SET PEEL, SET CUTTER

## ● SPEED

### Description

This command defines the print speed.

### Syntax

SPEED n

<u>Parameter</u>	<u>Description</u>
n	printing speed in inch per second

Model / IPS	1	1.5	2	2.5	3	3.5	4	5	6	8	10	12
LB-1000			x		x		x					

### Example

SPEED 10

### See Also

DENSITY

## ● DENSITY

### Description

This command sets the printing darkness.

### Syntax

DENSITY n

<u>Parameter</u>	<u>Description</u>
n	0~15
	0: specifies the lightest level
	15: specifies the darkest level

***Note: Default DENSITY setting is 8***

### Example

DENSITY 7

### See Also

DENSITY

## ● DIRECTION and Mirror Image

### Description


This command defines the printout direction and mirror image. This will be stored in the printer memory.

### Syntax


DIRECTION n[,m]

<u>Parameter</u>	<u>Description</u>
n	0 or 1. Please refer to the illustrations below:
m	0: Print normal image. 1: Print mirror image.


DIRECTION 0,0

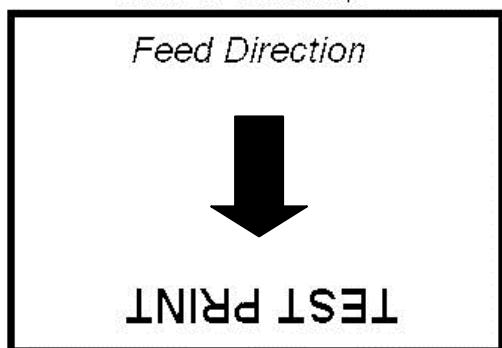


DIRECTION 1,0

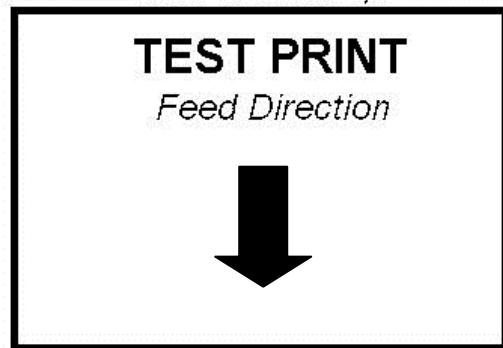

DIRECTION 0,1

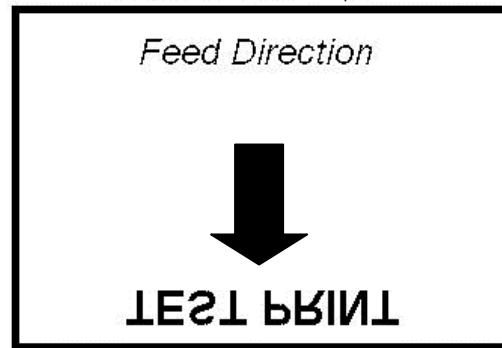

DIRECTION 1,1

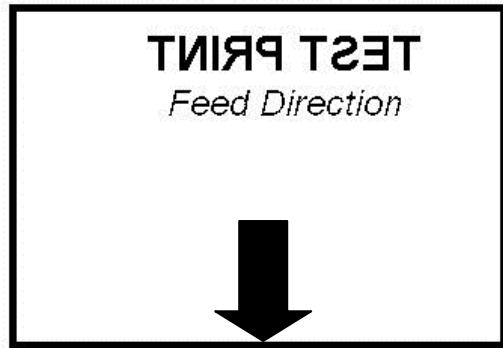

Model	Support	
	DIRECTION	MIRROR
LB-1000	X	X

**Example**

DIRECTION 0  
DIRECTION 0,1

**See Also**

REFERENCE

## ● REFERENCE


### Description

This command defines the reference point of the label. The reference (origin) point varies with the print direction, as shown:

### Syntax

REFERENCE x, y

<u>Parameter</u>	<u>Description</u>
x	Horizontal coordinate (in dots)
y	Vertical coordinate (in dots)

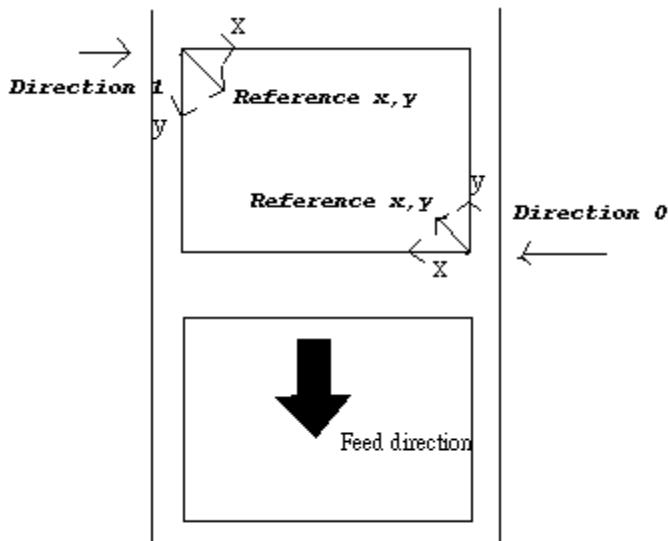

**Note:**    200 DPI: 1 mm = 8 dots  
              300 DPI: 1 mm = 12 dots

### Example

REFERENCE 10,10

### See Also

DIRECTION

## ● SHIFT

### Description

This command moves the label's vertical position. A positive value moves the label further from the printing direction; a negative value moves the label towards the printing direction. For a visual representation, see next page.

### Syntax

SHIFT n

#### Parameter

n


#### Description

The maximum value is 1 inch. For 200 dpi printers, the range is -203 to 203; for 300 dpi printers, the range is -300 to 300.

The unit is dot.

Model	Support
LB-1000	X

### Example

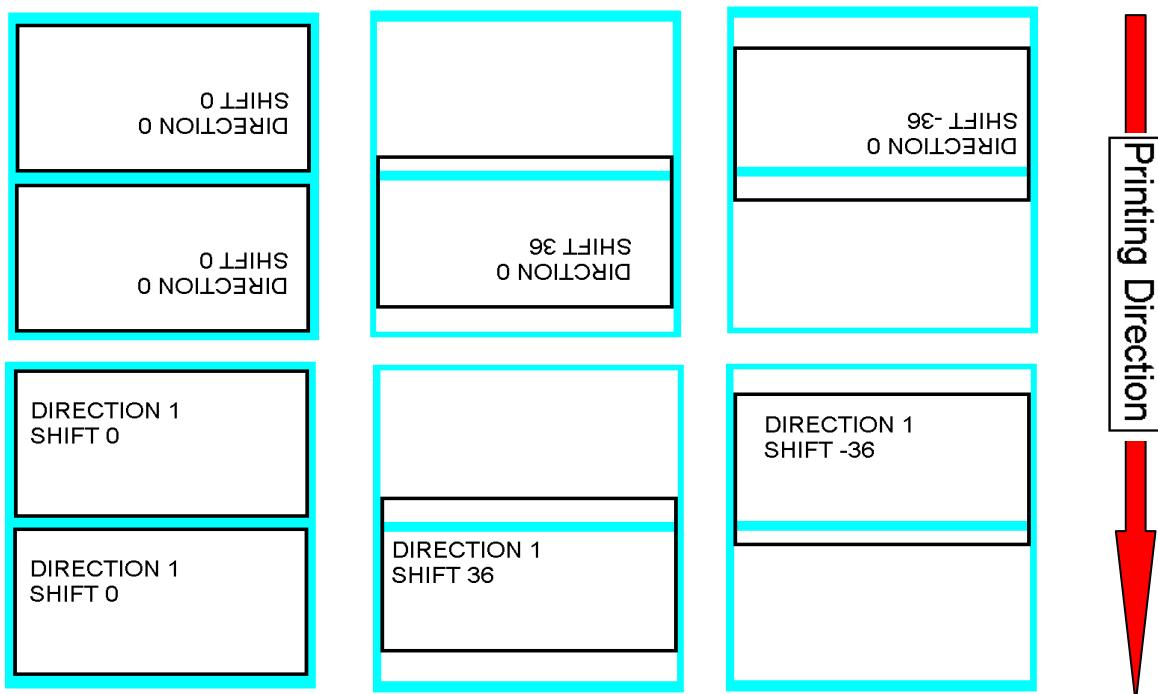

```
SIZE 4,2.5
GAP 2 mm,0
DIRECTION 0
SHIFT 30
OFFSET 0
CLS
TEXT 400,200,"3",0,1,1,"DIRECTION 0"
TEXT 400,250,"3",0,1,1,"SHIFT 30"
```

BOX 10,0,780,490,8  
PRINT 3,1

**See Also**

OFFSET, REFERENCE

## ● COUNTRY

### Description

This command orients the keyboard for use in different countries via defining special characters on the KP-200 series portable LCD keyboard (option).

### Syntax

COUNTRY n

<u>Parameter</u>	<u>Description</u>
n	001: USA
	002: Canadian-French
	003: Spanish (Latin America)
	031: Dutch
	032: Belgian
	033: French (France)
	034: Spanish (Spain)
	036: Hungarian
	038: Yugoslavian
	039: Italian
	041: Switzerland
	042: Slovak
	044: United Kingdom
	045: Danish
	046: Swedish
	047: Norwegian
	048: Polish
	049: German
	055: Brazil
	061: English (International)
	351: Portuguese
	358: Finnish

### Example

COUNTRY 001

### See Also

CODEPAGE, ~!

## ● CODEPAGE

### Description

This command defines the code page of international character set.

### Syntax

CODEPAGE n

#### Parameter

n

#### Description

Name or number of code page, which can be divided into 7-bit code page and 8-bit code page.

#### 7-bit code page name

USA: USA  
BRI: British  
GER: German  
FRE: French  
DAN: Danish  
ITA: Italian  
SPA: Spanish  
SWE: Swedish  
SWI: Swiss

#### 8-bit code page number

437: United States  
850: Multilingual  
852: Slavic  
860: Portuguese  
863: Canadian/French  
865: Nordic  
857: Turkish (TSPL2 printers only)

#### Windows code page

1250: Central Europe (TSPL2 printers only)  
1252: Latin I (TSPL2 printers only)  
1253: Greek (TSPL2 printers only)  
1254: Turkish (TSPL2 printers only)

**Note:** DATA LENGTH determines 7-bit or 8-bit communications parameter.

Model	7-bit Codepage										8-bit Codepage							Windows Codepage			
	USA	BRI	GER	FRE	DAN	ITA	SPA	SWE	SWI	437	850	852	860	863	865	857	1250	1252	1253	1254	
LB-1000	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	

## Example

CODEPAGE 437

## See Also

COUNTRY, SET COM1, ~!!

## ● CLS

### Description

This command clears the image buffer.

### Syntax

CLS

<u>Parameter</u>	<u>Description</u>
None	N/A

*Note: This command must be placed after SIZE command.*

### Example

CLS

### See Also

SIZE, GAP, BLINE

## ● FEED

### Description

This command feeds label with the specified length. The length is specified by dot.

### Syntax

FEED n

<u>Parameter</u>	<u>Description</u>
n	unit: dot
	1 ≤ n ≤ 9999

**Note:**    *200 DPI: 1 mm = 8 dots*  
             *300 DPI: 1 mm = 12 dots*

### Example

FEED 40

### See Also

BACKFEED, SIZE, GAP, BLINE, HOME, FORMFEED

### ● BACKFEED & BACKUP

## Description

This command feeds the label in reverse. The length is specified by dot.

## Syntax

BACKUP n (TSPL printers only)  
BACKFEED n (TSPL2 printers only)

<u>Parameter</u>	<u>Description</u>
n	unit: dot

$$1 \leq n \leq 9999$$

1 mm = 8

1 mm = 8 dots

**Note :**    *200 DPI : 1 mm = 8 dots*  
                    *300 DPI : 1 mm = 12 dots*

Model	Support	
	BACKUP	BACKFEED
LB-1000	X	X

**CAUTION: Improper back feed value may cause paper jam or wrinkle.**

## Example

BACKUP 40

BACKFEED 40

### See Also

FEED, SIZE, GAP, BLINE, HOME, FORMFEED

## ● FORMFEED

### Description

This command feeds label to the beginning of next label.

### Syntax

FORMFEED

<u>Parameter</u>	<u>Description</u>
None	N/A

### Example

```
SIZE 4, 2.5
GAP 0 mm,0
SPEED 4
DENSITY 7
DIRECTION 0
OFFSET 0.00
REFERENCE 0,0
SET PEEL OFF
SET CUTTER OFF
SET COUNTER @0 +1
@0="000001"
FORMFEED
CLS
BOX 1,1,360,65,12
TEXT 25,25, "3",0,1,1,"FORMFEED COMMAND TEST"
TEXT 25,80,"3",0,1,1,@0
PRINT 3,1
```

### See Also

FEED, SIZE, GAP, BLINE, HOME, BACKFEED

## ● HOME

### Description

This command will feed label until the internal sensor has determined the origin. Size and gap of the label should be defined before using this command.

### Syntax

HOME

<u>Parameter</u>	<u>Description</u>
None	N/A

Model	HOME	
	Back Label	Feed Label
LB-1000		X

### Example

```
SIZE 4,2,5
GAP 2 mm,0
SPEED 4
DENSITY 7
DIRECTION 0
OFFSET 0.00
REFERENCE 0,0
SET PEEL OFF
SET CUTTER OFF
SET COUNTER @0 +1
@0="000001"
HOME
CLS
BOX 1,1,360,65,12
TEXT 25,25,"3",0,1,1,"HOME COMMAND TEST"
TEXT 25,80,"3",0,1,1,@0
PRINT 3,1
```

### See Also

FEED, SIZE, GAP, BLINE, FORMFEED

## ● PRINT

### Description

This command prints the label format currently stored in the image buffer.


### Syntax

PRINT m [,n]

<u>Parameter</u>	<u>Description</u>
m	Specifies how many sets of labels will be printed. $1 \leq m \leq 999999999$ If $m=-1$ , printer will print the last label content for n copies.
n	Specifies how many copies should be printed for each particular label set. $1 \leq n \leq 999999999$

### Example

```
SIZE 60 mm, 20 mm
SET COUNTER @1 1
@1="0001"
CLS
TEXT 10,10,"3",0,1,1,@1
PRINT 3,2
PRINT -1,2
```

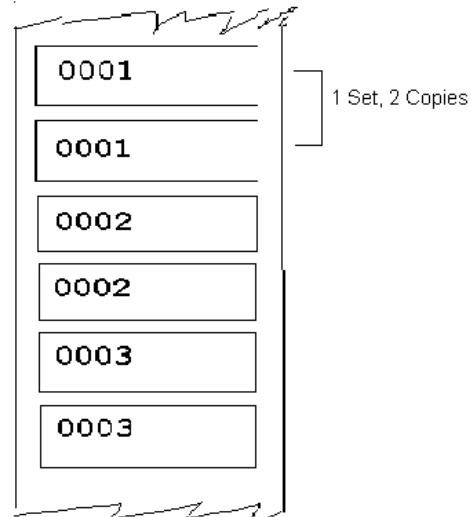

### See Also

SET COUNTER, INPUT, DOWNLOAD

## ● SOUND

### Description

This command-controls the sound frequency of the beeper. There are 10 levels of sounds. The timing control can be set by the "interval" parameter.

### Syntax

SOUND level, interval

<u>Parameter</u>	<u>Description</u>
level	Sound level: 0~9
interval	Sound interval: 1~4095

### Example

```
SOUND 5,200  
SOUND 3,200  
SOUND 3,200  
SOUND 4,200  
SOUND 2,200  
SOUND 2,200  
SOUND 1,200  
SOUND 2,200  
SOUND 3,200  
SOUND 4,200  
SOUND 5,200
```

## ● CUT

### Description

This command activates the cutter to immediately cut the labels without back feeding the label.

### Syntax

CUT

<u>Parameter</u>	<u>Description</u>
None	N/A

### Example

```
SIZE 3,3
GAP 0 mm,0
CLS
DIRECTION 0
REFERENCE 0,0
OFFSET 0.00 mm
SET CUTTER OFF
SET TEAR OFF
BOX 0,0,866,866,5
TEXT 100,100,"5",0,1,1,"FEED & CUT"
TEXT 100,200,"5",0,1,1,"300 DPI"
PRINT 1,1
FEED 260
CUT
```

### See Also

SET CUTTER, SET BACK, SET PARTIAL\_CUTTER

## ● LIMITFEED

### Description

If the gap sensor is not set to a suitable sensitivity while feeding labels, the printer will not be able to locate the correct position of the gap. This command stops label feeding and makes the red LED flash if the printer does not locate gap after feeding the length of one label plus one preset value.

### Syntax

LIMITFEED n            (inch, the English system)  
LIMITFEED n mm      (mm, the metric system)

<u>Parameter</u>	<u>Description</u>
n	The maximum length for sensor detecting.

### Note:

*The setting will remain resident in memory.*

*The default value is 10 inches when printer initializes.*

*For metric system, there must be a space between parameter n and mm.*

## ● SELFTEST

### Description

At this command, the printer will print out the printer information.

### Syntax

SELFTEST

Model	Support
LB-1000	X

### Example

SELFTEST

## Label Formatting Commands

### ● BAR

#### Description

This command draws a bar on the label format.

#### Syntax

BAR x, y, width, height

<u>Parameter</u>	<u>Description</u>
x	The upper left corner x-coordinate (in dots)
y	The upper left corner y-coordinate (in dots)
width	Bar width (in dots)
height	Bar height (in dots)

**Note:**    200 DPI: 1 mm = 8 dots  
              300 DPI: 1 mm = 12 dots

*Recommended max. bar height is 12 dots at 4" width. Bar height over 12 dots may damage the power supply and affect the print quality.*

*Max. print ratio is different for each printer model. Desktop and industrial printer ratio is limited to 20% and 30% respectively.*

#### Example

```
SIZE 4,2.5
GAP 0,0
SPEED 6
DENSITY 8
DIRECTION 0
CLS
BAR 100, 100, 300, 200
PRINT 1,1
```



#### See Also

BOX

## ● **Barcode**

### Description

This command prints 1D barcodes. The available bar codes are listed below:

- Code 128 (switching code subset automatically)
- Code 128M (switching code subset manually)
- EAN 128 (switching code subset automatically)
- Interleaved 2 of 5
- Interleaved 2 of 5 with check digit
- Code 39 standard
- Code 39 full ASCII
- Code 39 full ASCII with check digit
- Code 93
- EAN 13
- EAN 13 with 2 digits add-on
- EAN 13 with 5 digits add-on
- EAN 8
- EAN 8 with 2 digits add-on
- EAN 8 with 5 digits add-on
- Codabar
- Postnet
- UPC-A
- UPC-A with 2 digits add-on
- UPC-A with 5 digits add-on
- UPC-E
- UPC-E with 2 digits add-on
- UPC-E with 5 digits add-on
- MSI
- PLESSEY
- China POST
- ITF14
- EAN14
- CODE 11

## Syntax

BARCODE X, Y, "code type", height, human readable, rotation, narrow, wide, "code"

<u>Parameter</u>	<u>Description</u>
X	Specify the x-coordinate of the bar code on the label
Y	Specify the y-coordinate of the bar code on the label
code type	
128	Code 128, switching code subset A, B, C automatically
128M	Code 128, switching code subset A, B, C manually.

Control code	A	B	C
096	FNC3	FNC3	NONE
097	FNC2	FNC2	NONE
098	SHIFT	SHIFT	NONE
099	CODE C	CODE C	NONE
100	CODE B	FNC4	CODE B
101	FNC4	CODE A	CODE A
102	FNC1	FNC1	FNC1
103	Start (CODE A)		
104	Start (CODE B)		
105	Start (CODE C)		

*Use “!” as a starting character for the control code followed by three control codes. If the start subset is not set, the default starting subset is B.*

EAN128	Code 128, switching code subset A, B, C automatically
25	Interleaved 2 of 5
25C	Interleaved 2 of 5 with check digits
39	Code 39 full ASCII for TSPL2 printers
	Code 39 standard for TSPL printers
	Auto switch full ASCII and standard code 39 for <b>PLUS</b> models.
39C	Code 39 full ASCII with check digit for TSPL2 printers
	Code 39 standard with check digit for TSPL printers
	Auto switch full ASCII and standard code 39 for <b>PLUS</b> models.
39S	Code 39 standard for TSPL2 printers
93	Code 93
EAN13	EAN 13
EAN13+2	EAN 13 with 2 digits add-on
EAN13+5	EAN 13 with 5 digits add-on
EAN8	EAN 8
EAN8+2	EAN 8 with 2 digits add-on
EAN8+5	EAN 8 with 5 digits add-on
CODA	Codabar
POST	Postnet
UPCA	UPC-A
UPCA+2	UPC-A with 2 digits add-on
UPCA+5	UPC-A with 5 digits add-on

UPCE	UPC-E
UPCE+2	UPC-E with 2 digits add-on
UPCE+5	UPC-E with 5 digits add-on
CPOST	China post code
MSI	MSI code
MSIC	MSI with check digit
PLESSEY	PLESSEY code
ITF14	ITF 14 code
EAN14	EAN 14 code
11	Code 11

height	Bar code height (in dots)
human readable	0: not readable 1: human readable
rotation	0 : No rotation 90 : Rotate 90 degrees clockwise 180 : Rotate 180 degrees clockwise 270 : Rotate 270 degrees clockwise
narrow	Width of narrow element (in dots)
wide	Width of wide element (in dots)

	narrow : wide 1:1	narrow : wide 1:2	narrow : wide 1:3	narrow : wide 2:5	narrow : wide 3:7
128	10x	-	-	-	-
EAN128	10x	-	-	-	-
25	-	10x	10x	5x	-
25C	-	10x	10x	5x	-
39	-	10x	10x	5x	-
39C	-	10x	10x	5x	-
93	-	-	10x	-	-
EAN13	8x	-	-	-	-
EAN13+2	8x	-	-	-	-
EAN13+5	8x	-	-	-	-
EAN 8	8x	-	-	-	-
EAN 8+2	8x	-	-	-	-
EAN 8+5	8x	-	-	-	-
CODA	-	10x	10x	5x	-
POST	1x	-	-	-	-
UPCA	8x	-	-	-	-
UPCA+2	8x	-	-	-	-
UPCA+5	8x	-	-	-	-
UPCE	8x	-	-	-	-
UPCE+2	8x	-	-	-	-
UPCE+5	8x	-	-	-	-
CPOST	-	-	-	-	1x
MSI	-	-	10x	-	-
MSIC			10x		-
PLESSY	-	-	10x	-	-

ITF14	-	10x	10x	5x	-
EAN14	8x	-	-	-	-
11	-	10x	10x	5x	-

code number                  the maximum number of digits of bar code content

Barcode type	Maximum bar code length
128	-
EAN128	-
25	-
25C	-
39	-
39C	-
93	-
EAN13	12
EAN13+2	14
EAN13+5	17
EAN 8	7
EAN 8+2	9
EAN 8+5	12
CODA	-
POST	5,9,11
UPCA	11
UPCA+2	13
UPCA+5	16
UPCE	6
UPCE+2	8
UPCE+5	11
CPOST	-
MSI	-
MSIC	-
PLESSY	-
ITF14	13
EAN14	13
CODE 11	-

### Example

BARCODE 100,100,"39",96,1,0,2,4,"1000"

BARCODE 10,10,"128M",48,1,0,2,2,!104!096ABCD!101EFGH"

(The above example of code 128M encoded with CODE B start character. The next character will be the code 128 function character FNC3 which is then followed by the ABCD characters and EFGH characters encoded as CODE A subset.)

11	X
EAN14	X
ITF14	X
PLESSY	X
MSIC	X
MSI	X
CPOST	X
UPCE+5	X
UPCE+2	X
UPCE	X
UPCA+5	X
UPCA+2	X
UPCA	X
POST	X
CODA	X
EAN 8+5	X
EAN 8+2	X
EAN 8	X
EAN13+5	X
EAN13+2	X
EAN13	X
93	X
39S	X
25C	X
25	X
EAN128	X
128	X
Barcode Type	
Model	LB-1000

## ● BITMAP

### Description


This command draws bitmap images (as opposed to BMP graphic files).

### Syntax

BITMAP X, Y, width, height, mode, bitmap data...

<u>Parameter</u>	<u>Description</u>
X	Specify the x-coordinate
Y	Specify the y-coordinate
width	Image width (in bytes)
height	Image height (in dots)
mode	Graphic modes listed below: 0: OVERWRITE 1: OR 2: XOR
bitmap data	Bitmap data

### Example

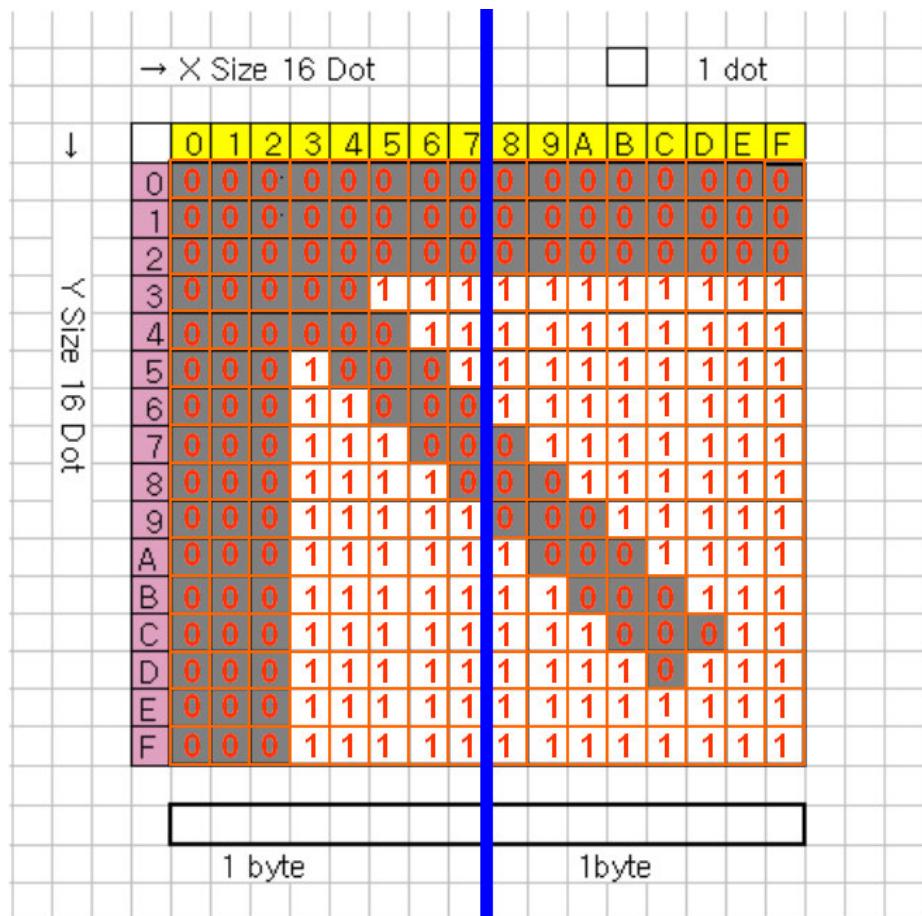


ROW	L-Byte	R-Byte
-----	--------	--------

(Y- axis)	Binary	Hexadecimal	Binary	Hexadecimal
0	00000000	00	00000000	00
1	00000000	00	00000000	00
2	00000000	00	00000000	00
3	00000111	07	11111111	FF
4	00000011	03	11111111	FF
5	00010001	11	11111111	FF
6	00011000	18	11111111	FF
7	00011100	1C	01111111	7F
8	00011110	1E	00111111	3F
9	00011111	1F	00011111	1F
A	00011111	1F	10001111	8F
B	00011111	1F	11000111	C7
C	00011111	1F	11100011	E3
D	00011111	1F	11110111	F7
E	00011111	1F	11111111	FF
F	00011111	1F	11111111	FF

SIZE 4,2

GAP 0,0

CLS

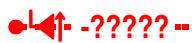BITMAP 200,200,2,16,0,  -?????--

PRINT 1,1

Hexadecimal	ASCII
53 49 5A 45 20 34 2C 32 0D 0A 47 41 50 20	SIZE 4,2
30 2C 30 0D 0A 43 4C 53 0D 0A 42 49 54 4D	GAP 0,0
41 50 20 32 30 30 2C 32 30 30 2C 32 2C 31	CLS
36 2C 30 2C 00 00 00 00 00 00 07 FF 03 FF	BITMAP 200,200,2,16,0,  -?- -???
11 FF 18 FF 1C 7F 1E 3F 1F 1F 1F 8F 1F C7	
1F E3 1F E7 1F FF 1F FF 0D 0A 50 52 49 4E	PRINT 1,1
54 20 31 2C 31 0D 0A	

## See Also

PUTBMP, PUTPCX

## ● BOX

### Description

This command draws rectangles on the label.

### Syntax

BOX X\_start, Y\_start, X\_end, Y\_end, line thickness

<u>Parameter</u>	<u>Description</u>
X_start	Specify x-coordinate of upper left corner (in dots)
Y_start	Specify y-coordinate of upper left corner (in dots)
X_end	Specify x-coordinate of lower right corner (in dots)
Y_end	Specify y-coordinate of lower right corner (in dots)
line thickness	Line thickness (in dots)


**Note:**    200 DPI: 1 mm = 8 dots  
              300 DPI: 1 mm = 12 dots

**Recommended max. thickness of box is 12mm at 4" width. Thickness of box larger than 12 mm may damage the power supply and affect the print quality.**

**Max. print ratio is different for each printer model. Desktop and industrial printer ratio is limited to 20% and 30% respectively.**

### Example

SIZE 4,2.5  
GAP 0,0  
SPEED 6  
DENSITY 8  
DIRECTION 0  
CLS  
BOX 100,100,200,200,5  
PRINT 1,1

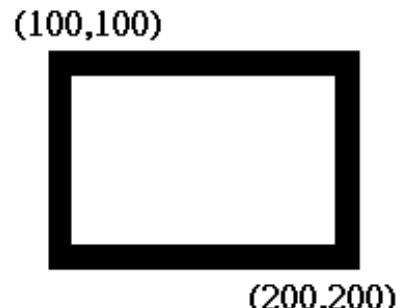

### See Also

BAR

## ● CIRCLE

### Description

This command draws a circle on the label.

### Syntax

CIRCLE X\_start, Y\_start, diameter, circle thickness

<u>Parameter</u>	<u>Description</u>
X_start	Specify x-coordinate of upper left corner (in dots)
Y_start	Specify y-coordinate of upper left corner (in dots)
diameter	Specify the diameter of the circle (in dots)
thickness	Thickness of the circle (in dots)

### Example

```
SIZE 80 mm, 30 mm
GAP 0,0
DIRECTION 1
CLS
BAR 250,20,100,1
BAR 250,20,1,100
CIRCLE 250,20,100,1
PRINT 1
```

## ● DMATRIX

### Description

This command is used to define the DataMatrix 2D bar code. Currently, only ECC200 error correction is supported.

### Syntax

DMATRIX x, y, width, height, [xm,row,col], expression

<u>Parameter</u>	<u>Description</u>
x	Horizontal start position (in dots)
y	Vertical start position (in dots)
width	The expected width of barcode area (in dots)
height	The expected height of barcode area (in dots)
xm	Module size (in dots)
row	Symbol size of row: 10 to 144
col	Symbol size of col: 10 to 144

### Example

```
SIZE 3,3
GAP 0,0
SPEED 4
DENSITY 8
DIRECTION 0
REFERENCE 0,0
OFFSET 0.00
SET CUTTER OFF
SET TEAR ON
CLS
DMATRIX 10,110,400,400,"DMATRIX EXAMPLE 1"
DMATRIX 310,110,400,400,x6,"DMATRIX EXAMPLE 2"
DMATRIX 10,310,400,400,x8,18,18,"DMATRIX EXAMPLE 3"
PRINT 1,1
```

## ● ERASE

### Description

This command clears a specified region in the image buffer.


### Syntax

ERASE X\_start, Y\_start, X\_width, Y\_height

<u>Parameter</u>	<u>Description</u>
X_start	The x-coordinate of the starting point (in dots)
Y_start	The y-coordinate of the starting point (in dots)
X_width	The region width in x-axis direction (in dots)
Y_height	The region height in y-axis direction (in dots)

### Example

```
SIZE 4.2.5  
GAP 0.0  
SPEED 6  
DENSITY 8  
DIRECTION 0  
CLS  
BAR 100, 100, 300, 300  
ERASE 150,150,200,200  
PRINT 1,1
```

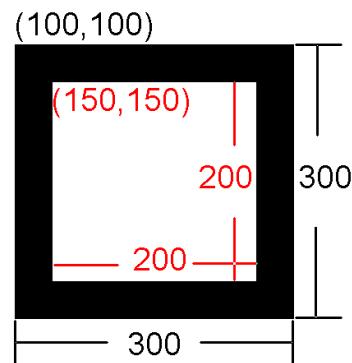

### See Also

CLS

## ● MAXICODE

### Description

This command defines a 2D Maxicode.

### Syntax

MAXICODE x, y, mode, [class, country, post, Lm,] "message"

For mode 2 or 3:

MAXICODE x, y, mode, class, country, postal code, "low priority message"

If country is 840, the postal code is in 99999,9999 format.

For other countries, the code is up to 6 alphanumeric characters.

For mode 4,5,6

MAXICODE x, y, mode, [Lm], "message"

\* AIM special format is supported, see page 23 in the spec.

**Note: Mode 6 is not supported in TSPL2 printers firmware.**

<u>Parameter</u>	<u>Description</u>
x	X-coordinate of the starting point in dot
y	Y-coordinate of the starting point in dot
mode	2,3,4,5
class	Class of service, 3-digit number (for mode 2,3)
country	Country code, 3-digit number (for mode 2,3)
post	Post code (for mode 2,3) Mode 2: (USA) 5-digit+ 4-digit number Mode3: (Canada) 6 alphanumeric post code included by double quotes.
Lm	Expression length (double quote is ignored) , 1≤m≤138, (this parameter is just for mode 4 and 5.)
message	Barcode content

### Example

SIZE 4,2  
GAP 0,0  
CLS  
SPEED 4  
DENSITY 8  
OFFSET 0.00  
REFERENCE 0,0  
SET CUTTER OFF  
SET TEAR ON

REM \*\*\*\*\*Mode 2 For USA\*\*\*\*\*  
MAXICODE 110,100,2,300,840,06810,7317,"DEMO 2 FOR USA MAXICODE"  
TEXT 100,520,"3",0,2,2,"Mode 2 For USA"  
PRINT 1,1

```
REM *****Mode 3 For Canada*****
CLS
MAXICODE 110,100,3,300,863,"107317","DEMO 3 FOR CANADA MAXICODE"
TEXT 100,520,"3",0,2,2,"Mode 3 For CANADA"
PRINT 1,1

REM *****MODE4*****
CLS
MAXICODE 110,100,4,"DEMO 4 FOR MAXICODE"
MAXICODE 600,100,4,19,DEMO 4 FOR MAXICODE
TEXT 100,520,"3",0,2,2,"Mode 4 FOR MAXICODE"
PRINT 1,1

REM *****MODE 5*****
CLS
MAXICODE 110,100,5,"DEMO 5 FOR MAXICODE"
MAXICODE 600,100,5,19,DEMO 5 FOR MAXICODE
TEXT 100,520,"3",0,2,2,"DEMO 5 FOR MAXICODE"
PRINT 1
```

## ● PDF417

### Description

This command defines a PDF417 2D barcode.

### Syntax

PDF417 x, y, width, height, rotate, [option], expression

<u>Parameter</u>	<u>Description</u>
x	X-coordinate of starting point (in dots)
y	Y-coordinate of starting point (in dots)
width	Expected width (in dots)
height	Expected height (in dots)
rotate	Rotation counterclockwise. 0 : No rotation 90 : 90 degrees 180 : 180 degrees 270 : 270 degrees
expression	Barcode text or string expression to be printed.
[option]	
P	Data compression method 0: Auto encoding 1: Binary mode
E	Error correction level. Range: 0~8
M	Center pattern in barcode area 0: The pattern will print upper left justified the area 1: The pattern is printed middle of area
Ux,y,c	Human readable x: Human readable characters in the specified x-coordinate y: Human readable characters in the specified y-coordinate c: Maximum characters of human readable character per line
W	Module width in dot. Range: 2~9
H	Bar height in dot. Range: 4~99
R	Maximum number of rows
C	Maximum number of columns
T	Truncation. 0: Not truncated 1: Truncated
Lm	Expression length (without double quote), $1 \leq m \leq 2048$

### Example

SIZE 3,3  
GAP 0.12,0

```
CLS  
SPEED 6  
DENSITY 8  
DIRECTION 1  
REFERENCE 0,0
```

```
REM *****WITHOUT OPTIONS*****  
CLS  
PDF417 50,50,400,200,0,"Without Options"  
PRINT 1,1
```

```
REM *****OPTION:E4*****  
CLS  
PDF417 50,50,400,200,0,E4,"Error correction level:4"  
PRINT 1,1
```

```
REM *****OPTION:E4 W4*****  
CLS  
PDF417 50,50,600,600,0,E4,W4,"Error correction level:4  
module width 4 dots"  
PRINT 1,1
```

```
REM *****OPTION:E4 W4 H4*****  
CLS  
PDF417 50,50,600,600,0,E4,W4,H4,"Error correction level:4  
module width 4 dots  
bar height 4 dots"  
PRINT 1,1
```

```
REM *****OPTION:E4 W4 H4 R25*****  
CLS  
PDF417 50,50,600,600,0,E4,W4,H4,R25,"Error correction level:4  
Module Width 4 dots  
Bar Height 4 dots  
Maximum Number of Rows: 25 Rows  
"  
PRINT 1,1
```

```
REM *****OPTION:E4 W4 H4 R40 C3*****  
CLS  
PDF417 50,50,600,600,0,E4,W4,H4,R40,C3,"Error correction level:4  
Module Width 4 dots  
Bar Height 4 dots  
Maximum Number of Rows: 40 Rows  
Maximum number of columns: 3 Cols  
"  
PRINT 1,1
```

```
REM *****OPTION:E4 W4 H4 R40 C4 T0*****
CLS
PDF417 50,50,600,600,0,E4,W4,H4,R40,C4,T0,"Error correction level:4
Module Width 4 dots
Bar Height 4 dots
Maximum Number of Rows: 40 Rows
Maximum number of columns: 4 Cols
Truncation:0
"
PRINT 1,1
```

```
REM *****OPTION:E4 W4 H4 R40 C4 T1*****
CLS
PDF417 50,50,900,900,0,E4,W4,H4,R40,C4,T1,"Error correction level:4
Module Width 4 dots
Bar Height 4 dots
Maximum Number of Rows:5 Rows
Maximum number of columns:90 Cols
Truncation:1
"
PRINT 1,1
```

```
REM *****OPTION:E4 W4 H4 R40 C4 T0 L169*****
CLS
PDF417 50,50,900,900,0,E4,W4,H4,R40,C4,T0,L169,Error correction level:4
Module Width 4 dots
Bar Height 4 dots
Maximum Number of Rows: 40 Rows
Maximum number of columns: 4 Cols
Truncation:0
Expression length:167
PRINT 1,1
```

```
REM *****OPTION:E4 W4 H4 R40 C4 T1 L169*****
CLS
PDF417 50,50,900,900,0,E4,W4,H4,R40,C4,T1,L169,Error correction level:4
Module Width 4 dots
Bar Height 4 dots
Maximum Number of Rows: 40 Rows
Maximum number of columns: 4 Cols
Truncation:1
Expression length:169
PRINT 1,1
```

```
REM *****OPTION:P0 E4 W4 H4 R40 C4 T1 L169*****
CLS
PDF417 50,50,900,900,0,P0,E4,W4,H4,R40,C4,T1,L169,Error correction level:4
```

Module Width 4 dots  
Bar Height 4 dots  
Maximum Number of Rows: 40 Rows  
Maximum number of columns: 4 Cols  
Truncation:1  
Expression length:169  
PRINT 1,1

REM \*\*\*\*\*OPTION:P0 E4 M0 W6 H6 R60 C4 T0 L283\*\*\*\*\*  
CLS  
PDF417 50,50,900,600,0,P0,E4,M0,W6,H6,R60,C4,T0,L283, Data compression method: P0  
Error correction level: E4  
Center pattern in barcode area: M0  
Human Readable: No  
Module Width 6 dots: W6  
Bar Height 6 dots: H6  
Maximum Number of Rows: 60 Rows: R60  
Maximum number of columns: 4 Cols: C4  
Truncation:0: T0  
Expression length:283: L283  
PRINT 1,1

REM \*\*\*\*\*OPTION:P1 E4 M1 U100,500,10 W4 H4 R60 C4 T1 L297\*\*\*\*\*  
CLS  
PDF417 50,50,900,600,0,P1,E4,M1,U100,500,10,W6,H6,R60,C4,T1,L297, Data compression method: P1  
Error correction level: E4  
Center pattern in barcode area: M1  
Human Readable: Yes: U100,300,10  
Module Width 6 dots: W6  
Bar Height 6 dots: H6  
Maximum Number of Rows: 60 Rows: R60  
Maximum number of columns: 4 Cols: C4  
Truncation:1: T1  
Expression length:297: L297  
PRINT 1,1

## ● AZTEC

### Description

This command is used to define the AZTEC 2D bar code. Supported by V6.60EZ.

### Syntax

AZTEC x,y,rotate,[size,]ecp,]flg,]menu,]multi,]rev,"content"

<u>Parameter</u>	<u>Description</u>
x	Horizontal start position (in dots)
y	Vertical start position (in dots)
rotate	Rotation 0: No rotation 90: 90 degrees 180: 180 degrees 270: 270 degrees
size	Element module size (1 to 20), default is 6
ecp	Error control (& symbol size/type) parameter 0 : default error correction level 1 to 99 : minimum error correction percentage 101 to 104 : 1 to 4-layer Compact symbol 201 to 232 : 1 to 32-layer Full-Range symbol 300 : a simple Aztec "Rune"
flg	0 : input message is straight bytes 1 : input uses "<Esc>n" for FLG(n), "<Esc><Esc>" for "<Esc>"
menu	Menu symbol (0 : no, 1 : yes), default is 0
multi	Number of symbols (1 to 26), default is 6
rev	Output to be reversed (0 : no, 1 : yes), default is 0
content	Barcode content

### Example

```
SIZE 3,3
GAP 0,0
SPEED 4
DENSITY 8
DIRECTION 0
REFERENCE 0,0
OFFSET 0.00
SET CUTTER OFF
SET TEAR ON
CLS
AZTEC 200,10,0,"ABCDEFGHIJKLMNPQRSTUVWXYZ0123456789"
PRINT 1

CLS
AZTEC 200,10,0,4,"ABCDEFGHIJKLMNPQRSTUVWXYZ0123456789"
PRINT 1
```

CLS  
AZTEC 200,10,0,4,1,"ABCDEFGHIJKLMNOPQRSTUVWXYZ0123456789"  
PRINT 1

CLS  
AZTEC 200,10,0,4,1,0,"ABCDEFGHIJKLMNOPQRSTUVWXYZ0123456789"  
PRINT 1

CLS  
AZTEC 200,10,0,4,1,0,0,"ABCDEFGHIJKLMNOPQRSTUVWXYZ0123456789"  
PRINT 1

CLS  
AZTEC 200,10,0,4,1,0,0,1,"ABCDEFGHIJKLMNOPQRSTUVWXYZ0123456789"  
PRINT 1

CLS  
AZTEC 200,10,0,4,1,0,0,1,1,"ABCDEFGHIJKLMNOPQRSTUVWXYZ0123456789"  
PRINT 1

## ● PUTBMP

### Description

This command prints BMP format images.

### Syntax

PUTBMP X, Y, "filename"

<u>Parameter</u>	<u>Description</u>
X	The x-coordinate of the BMP format image
Y	The y-coordinate of the BMP format image
filename	The downloaded BMP filename.

Model	PUTBMP Command Supported
LB-1000	X

### Example

```
C:\BMP-PCX>DIR
Volume in drive C is WIN98
Volume Serial Number is 4140-4735

Directory of C:\BMP-PCX

01/03/2005  01:06 PM    <DIR>   .
01/03/2005  01:06 PM    <DIR>   ..
01/03/2005  01:52 PM           12,430 TSC.bmp
01/03/2005  01:10 PM           1,181 TSC.pcx
              2 File(s)        13,611 bytes
              2 Dir(s)   8,802,189,312 bytes free

C:\BMP-PCX>COPY CON LPT1
DOWNLOAD "TSC.BMP",12430,^Z
      1 file(s) copied.

C:\BMP-PCX>COPY TSC.BMP/B LPT1
      1 file(s) copied.

C:\BMP-PCX>COPY CON LPT1
SIZE 4,2.5
GAP 0,0
CLS
PUTBMP 100,100,"TSC.BMP"
PRINT 1,1
^Z
      1 file(s) copied.

C:\BMP-PCX>_
```

### See Also

DOWNLOAD, BITMAP, PUTPCX

## ● PUTPCX

### Description

This command prints PCX format images.

TSPL language supports 2-color PCX format graphics.

TSPL2 language supports 256-color PCX format graphics.

### Syntax

PUTPCX X, Y, "filename"

<u>Parameter</u>	<u>Description</u>
X	The x-coordinate of the PCX image
Y	The y-coordinate of the PCX image
filename	The downloaded PCX filename. Case sensitive

Model	Support	
	2 – color PCX	256 – color PCX
LB-1000	X	X

### Example

```
C:\BMP-PCX>DIR
 Volume in drive C is WIN98
 Volume Serial Number is 4140-4735

 Directory of C:\BMP-PCX

01/03/2005  01:06 PM    <DIR>   .
01/03/2005  01:06 PM    <DIR>   ..
01/03/2005  01:52 PM           12,430 TSC.bmp
01/03/2005  01:10 PM           1,181 TSC.pcx
              2 File(s)        13,611 bytes
              2 Dir(s)   8,802,189,312 bytes free

C:\BMP-PCX>COPY CON LPT1
DOWNLOAD "TSC.PCX",1181,^Z
      1 file(s) copied.

C:\BMP-PCX>COPY TSC.PCX/B LPT1
      1 file(s) copied.

C:\BMP-PCX>COPY CON LPT1
SIZE 4,2.5
GAP 0,0
CLS
PUTPCX 100,100,"TSC.PCX"
PRINT 1,1
^Z
      1 file(s) copied.

C:\BMP-PCX>_
```

### See Also

DOWNLOAD, BITMAP, PUTPCX

## ● QR CODE

### Description

This command prints QR code.

### Syntax

QR CODE X, Y, ECC Level, cell width, mode, rotation, [model, mask,]"Data string"

<u>Parameter</u>	<u>Description</u>
X	The upper left corner x-coordinate of the QR code
Y	The upper left corner y-coordinate of the QR code
ECC level	Error correction recovery level L : 7% M : 15% Q : 25% H : 30%
cell width	1~10
mode	Auto / manual encode A : Auto M : Manual
rotation	0 : 0 degree 90 : 90 degree 180 : 180 degree 270 : 270 degree
model	M1: (default), original version M2: enhanced version
mask	S0~S8, default is S7
Data string	The encodable character set is described as below

Encodable character set:

- 1). Numeric data: (digits 0~9)
- 2). Alphanumeric data  
    Digits 0-9  
    Upper case letters A-Z;  
    Nine other characters: space, \$ % \* + - . / : );
- 3). 8-bit byte data.  
    JIS 8-bit character set (Latin and Kana) in accordance with JIS X 0201
- 4). Kanji characters  
    Shift JIS values 8140<sub>HEX</sub> –9FFC<sub>HEX</sub> and E040<sub>HEX</sub> –EAA4<sub>HEX</sub>. These are values shifted from those of JIS X 0208. Refer to JIS X 0208 Annex 1 Shift Coded Representation for detail.

Data characters per symbol (for maximum symbol size):

	<u>Model 1 (Version 14-L)</u>	<u>Model 2 (Version 40-L)</u>
1). Numeric data:	1,167 characters	7,089 characters
2). Alphanumeric data:	707 characters	4,296 characters
3). 8-bit byte data:	486 characters	2,953 characters
4). Kanji data:	299 characters	1,817 characters

- \*If "A" is the first character in the data string, then the following data after "A" is Alphanumeric data.
- \*If "N" is the first character in the data string, then the following data after "N" is numeric data.
- \*If "B" is the first character in the data string, then the following 4 digits after "B" is used to specify numbers of data. After the 4 digits is the number of bytes of binary data to be encoded.
- \*If "K" is the first character in the data string , then the following data after "K" is Kanji data.
- \*If "!" is in the data string and follows by "N", "A", "B", "K" then it will be switched to specified encodable character set.

Model	QR Code
LB-1000	X

## Example

### Manual mode example:

QR CODE 100,10,L,7,M,0,M1,S1,"ATHE FIRMWARE HAS BEEN UPDATED"  
(Where A: Alphanumeric data)

QR CODE 100,10,M,7,M,0,M1,S2,"N123456"  
(Where N: Numeric data)

QR CODE 100,10,Q,7,M,0,M1,S3,"N123456!ATHE FIRMWARE HAS BEEN UPDATED"  
(Where N: Numeric data ; !:Transfer char ; A: Alphanumeric data)

QR CODE 100,10,H,7,M,0,M1,S3,"B0012Product name"  
(where B: Binary data ; 0012: 12 bytes )

QR CODE 100,10,M,7,M,0,M1,S3,"K"  
(Where K: Kanji data)

### Auto mode example:

QR CODE 100,10,M,7,A,0,"THE FIRMWARE HAS BEEN UPDATED"

#### (1) Auto mode example

##### a. General data string

SIZE 4,2,5

GAP 0.12,0

CLS

QR CODE 10,10,H,4,A,0,"ABCabc123"

QR CODE 160,160,H,4,A,0,"123ABCabc"

QR CODE 310,310,H,4,A,0,"印表機 ABCabc123"

PRINT 1,1

##### b. Data string including <Enter> character (0Dh, 0Ah)

SIZE 4,2,5

GAP 0.12,0

CLS

QR CODE 10,10,H,4,A,0,"ABC<Enter>

abc<Enter>

```
123"  
QRCode 160,160,H,4,A,0,"123<Enter>  
ABC<Enter>  
abc"  
QRCode 310,310,H,4,A,0,"印表機<Enter>  
ABC<Enter>  
abc<Enter>  
123"  
PRINT 1,1
```

c. Data string concatenation (Must be used with DOWNLOAD ... EOP command)

```
DOWNLOAD "DEMO.BAS"  
SIZE 4,2.5  
CAP 0.12,0  
CLS  
QRCode 10,10,H,4,A,0,"ABCabc123"+STR$(1234)  
QRCode 160,160,H,4,A,0,"123ABCabc"+"1234"  
QRCode 310,310,H,4,A,0,"印表機 ABCabc123"+"1234"+"abcd"  
PRINT 1,1  
EOP  
DEMO
```

d. Data string including double quote ("") character, please use \" instead of

```
SIZE 4,2.5  
CAP 0.12,0  
CLS  
QRCode 10,10,H,4,A,0,"ABC\"["]abc\"["]123"  
QRCode 160,160,H,4,A,0,"123\"["]ABC\"["]abc"  
QRCode 310,310,H,4,A,0,"\"["]印表機\"["]ABCabc123"  
PRINT 1,1
```

(3) Manual mode

a. General data string :

```
SIZE 4,2.5  
CAP 0.12,0  
CLS  
QRCode 10,10,H,4,M,0,"AABC!B0003abc!N123"  
QRCode 160,160,H,4,M,0,"N123!AABC!B0003abc"  
QRCode 310,310,H,4,M,0,"K 印表機!AABC!B0006abc123"  
PRINT 1,1
```

b. Data string including <Enter> character, <Enter> is an 8-bit byte data

```
SIZE 4,2.5  
CAP 0.12,0  
CLS  
QRCode 10,10,H,4,M,0,"AABC!B0007<Enter>  
abc<Enter>  
!N123"  
QRCode 160,160,H,4,M,0,"N123!B0002<Enter>  
!AABC!B0005<Enter>  
abc"
```

QRCode 310,310,H,4,M,0,"K 印表機!B0002<Enter>  
!AABC!B0010<Enter>  
abc<Enter>  
123"  
PRINT 1,1

c. Data string concatenation (Must be used with DOWNLOAD ... EOP command)

DOWNLOAD "A.BAS"  
SIZE 4,2.5  
CAP 0.12,0  
CLS  
QRCode 10,10,H,4,M,0,"AABC!B0006abc123!N"+STR\$(1234)  
QRCode 160,160,H,4,M,0,"N123!AABC!B0007abc"+"1234"  
QRCode 310,310,H,4,M,0,"K 印表機!AABC!B0014abc123"+"1234"+"abcd"  
PRINT 1,1  
EOP  
A

d. Data string including double quote ("") character, please use \" instead of

SIZE 4,2.5  
CAP 0.12,0  
CLS  
QRCode 10,10,H,4,M,0,"AABC!B0005\"abc\"!N123"  
QRCode 160,160,H,4,M,0,"N123!B0001\"!AABC!B0004\"abc"  
QRCode 310,310,H,4,M,0,"B0001\"!K 印表機!B0010\"ABCabc123"  
PRINT 1,1

## ● RSS

### Description

This command is used to draw a RSS bar code on the label format

### Syntax

```
RSS x,y,"sym",rotate,pixMult,sepHt,"content"  
RSS x,y,"RSSEXP",rotate,pixMult,sepHt,segWidth,"content"  
RSS x,y,"UCC128CCA",rotate,pixMult,sepHt,linHeight,"content"  
RSS x,y,"UCC128CCC",rotate,pixMult,sepHt,linHeight,"content"
```

<u>Parameter</u>	<u>Description</u>
x	X-coordinate
y	Y-coordinate
sym	Symbology type: RSS14: RSS14 RSS14T: RSS14 Truncated RSS14S: RSS14 Stacked RSS14SO: RSS14 Stacked Omnidirectional RSSLIM: RSS Limited RSSEXP: RSS Expanded UPCA: UPC-A UPCE: UPC-E EAN13: EAN-13 EAN8: EAN-8 UCC128CCA: UCC/EAN-128 & CC-A/B UCC128CCC - UCC/EAN-128 & CC-C
Rotate	Rotation (0, 90, 180, and 270 valid)
pixMult	Module width in dot (1 to 10 valid). The following barcode height is calculated by printer. *RSS14: 33 x pixMult. *RSS14T: 13 x pixMult. *RSS14S: 13 x pixMult. *RSS14SO: 33 x pixMult. *RSSLIM: 13 x pixMult. *RSSEXP: 33 x pixMult. *EAN8: 60 x pixMult. *EAN13: 74 x pixMult. *UPCA: 74 x pixMult. *UPCE: 74 x pixMult.
sepHt	Separator row height (1 and 2 valid). *pixMult times sepHt is the real separator row height. It is calculated by printer.
segWidth	Segment width of RSS expanded (even 2 to 22 valid)
linHeight	UCC/EAN-128 height in dot (1 to 500 valid)
content	Barcode content or string expression Content of UPCE must be: *00abc0000hij = abhijc, where c = 0-2 *00abc00000ij = abcij3 *00abcd00000j = abcdj4 *00abcde0000j = abcdej where j = 5-9

**Note:** 200 DPI: 1 mm = 8 dots

**300 DPI: 1 mm = 12 dots**

*Recommended max. height of reversed black area is 12mm at 4" width. Height of reversed area that is larger than 12 mm may damage the power supply and affect the print quality.*

*Max. print ratio is different for each printer model. Desktop and industrial printer ratio is limited to 20% and 30% respectively.*

## **Example**

SIZE 100 mm,100 mm

GAP 0,0

CLS

RSS 300,300,"RSS14",0,2,2,"1234567890|ABCDEFG"

RSS 300,300,"RSS14T",90,2,2,"1234567890|ABCDEFG"

RSS 300,300,"RSS14S",180,2,2,"1234567890|ABCDEFG"

RSS 300,300,"RSS14SO",270,2,2,"1234567890|ABCDEFG"

PRINT 1,1

SIZE 100 mm,100 mm

GAP 0,0

CLS

RSS 300,300,"RSSLIM",0,2,2,"1234567890|ABCDEFG"

RSS 300,300,"RSSEXP",90,2,2,22,"1234567890|ABCDEFG"

RSS 300,300,"UPCA",180,2,2,"1234567890|ABCDEFG"

RSS 300,300,"UPCE",270,2,2,"000|ABCDEFG"

PRINT 1,1

SIZE 100 mm,100 mm

GAP 0,0

CLS

RSS 300,300,"EAN13",0,2,2,"123456789012|ABCDEFG"

RSS 300,300,"EAN8",90,2,2,"1234567|ABCDEFG"

RSS 300,300,"UCC128CCA",180,2,2,25,"1234567890|ABCDEFG"

RSS 300,300,"UCC128CCC",270,2,2,25,"1234567890|ABCDEFG"

PRINT 1,1

### **\*Example of UPCE mode**

SIZE 4,1

CLS

REM UPCE Rule 1: **00abc0000hij** = abhijc, where c = 0-2

RSS 10,10,"UPCE",0,2,2,"001200000456|ABCDEFG"

RSS 210,10,"UPCE",0,2,2,"001210000456|ABCDEFG"

RSS 410,10,"UPCE",0,2,2,"001220000456|ABCDEFG"

PRINT 1

SIZE 4,1

CLS

REM UPCE Rule 2: **00abc00000ij** = abcij3

RSS 10,10,"UPCE",0,2,2,"001230000045|ABCDEFG"

PRINT 1  
SIZE 4,1  
CLS  
REM UPCE Rule 3: ***00abcd0000j*** = abcdj4  
RSS 10,10,"UPCE",0,2,2,"001234000005|ABCDEFG"  
PRINT 1

SIZE 4,1  
CLS  
REM UPCE Rule 4: ***00abcde0000j*** = abcdej where j = 5-9  
RSS 10,10,"UPCE",0,2,2,"001234500005|ABCDEFG"  
RSS 160,10,"UPCE",0,2,2,"001234500006|ABCDEFG"  
RSS 310,10,"UPCE",0,2,2,"001234500007|ABCDEFG"  
RSS 460,10,"UPCE",0,2,2,"001234500008|ABCDEFG"  
RSS 610,10,"UPCE",0,2,2,"001234500009|ABCDEFG"  
PRINT 1

\*Example of barcode height of EAN8 EAN13 UPCA and UPCE.  
SIZE 4,4  
GAP 0,0  
CLS  
RSS 10,10,"EAN8",0,1,1,"1234567|ABCDEFG"  
RSS 210,10,"EAN8",0,2,1,"1234567|ABCDEFG"  
RSS 410,10,"EAN8",0,3,1,"1234567|ABCDEFG"  
PRINT 1

SIZE 4,3  
GAP 0,0  
CLS  
RSS 10,10,"EAN13",0,1,1,"123456789012|ABCDEFG"  
RSS 210,10,"EAN13",0,2,1,"123456789012|ABCDEFG"  
RSS 410,10,"EAN13",0,3,1,"123456789012|ABCDEFG"  
PRINT 1

SIZE 4,3  
GAP 0,0  
CLS  
RSS 10,10,"UPCA",0,1,1,"12345678901|ABCDEFG"  
RSS 210,10,"UPCA",0,2,1,"12345678901|ABCDEFG"  
RSS 410,10,"UPCA",0,3,1,"12345678901|ABCDEFG"  
PRINT 1

SIZE 4,3  
GAP 0,0  
CLS  
RSS 10,10,"UPCE",0,1,1,"001200000456|ABCDEFG"  
RSS 210,10,"UPCE",0,2,1,"001210000456|ABCDEFG"  
RSS 410,10,"UPCE",0,3,1,"001220000456|ABCDEFG"  
PRINT 1

## ● REVERSE

### Description

This command reverses a region in image buffer.

### Syntax

REVERSE X\_start, Y\_start, X\_width, Y\_height

<u>Parameter</u>	<u>Description</u>
X_start	The x-coordinate of the starting point (in dots)
Y_start	The y-coordinate of the starting point (in dots)
X_width	X-axis region width (in dots)
Y_height	Y-axis region height (in dots)

**Note:** 200 DPI: 1 mm = 8 dots

300 DPI: 1 mm = 12 dots

*Recommended max. height of reversed black area is 12mm at 4" width. Height of reversed area that is larger than 12 mm may damage the power supply and affect the print quality.*

*Max. print ratio is different for each printer model. Desktop and industrial printer ratio is limited to 20% and 30% respectively.*

### Example

```
SIZE 4,2.5
GAP 0,0
SPEED 6
DENSITY 8
DIRECTION 0
CLS
TEXT 100,100,"3",0,1,1,"REVERSE"
REVERSE 90,90,128,40
PRINT 1,1
```

REVERSE

## ● TEXT

### Description

This command prints text on label

### Syntax

TEXT X, Y, "font", rotation, x-multiplication, y-multiplication, "content"

<u>Parameter</u>	<u>Description</u>
X	The x-coordinate of the text
Y	The y-coordinate of the text
font	Font name 0: Monotype CG Triumvirate Bold Condensed, font width and height is stretchable 1: 8 x 12 fixed pitch dot font 2: 12 x 20 fixed pitch dot font 3: 16 x 24 fixed pitch dot font 4: 24 x 32 fixed pitch dot font 5: 32 x 48 dot fixed pitch font 6: 14 x 19 dot fixed pitch font OCR-B 7: 21 x 27 dot fixed pitch font OCR-B 8: 14 x 25 dot fixed pitch font OCR-A ROMAN.TTF: Monotype CG Triumvirate Bold Condensed, font width and height proportion is fixed
rotation	The rotation angle of text 0 : No rotation 90 : degrees, in clockwise direction 180 : degrees, in clockwise direction 270 : degrees, in clockwise direction

x-multiplication Horizontal multiplication, up to 10x.

Available factors: 1~10

For "ROMAN.TTF" true type font, this parameter is ignored.

For font "0", this parameter is used to specify the width (point) of true type font. 1 point=1/72 inch.

y-multiplication Vertical multiplication, up to 10x.

Available factors: 1~10

For true type font, this parameter is used to specify the height (point) of true type font. 1 point=1/72 inch.

#### Note:

(1). The internal font (font #1~#5) pitch between TSPL and TSPL2 is different.

(2). Font "0" and "ROMAN.TTF" internal True Type Fonts are available in TSPL2 language printers, but not TSPL language printers.

(3). If there is any double quote ("") within the text, please change it to \["].

(4). If font "0" is used, the font width and font height is stretchable by x-multiplication and y-multiplication parameter. It is expressed by pt (point). 1 point=1/72inch.

MODEL	Font Type									
	0	1	2	3	4	5	6	7	8	ROMAN.TTF
LB-1000	X	X	X	X	X	X	X	X	X	X

### Example

SIZE 3,2

GAP 0,0

CLS

TEXT 100,100,"5",0,1,1,"["]DEMO FOR TEXT["]"

TEXT 100,200,"ROMAN.TTF",0,1,20,"["]True Type Font Test Print["]"

PRINT 1,1

## Status Polling Commands (RS-232)

- <ESC>!?

### Description

This command obtains the printer status at any time, even in the event of printer error. An inquiry request is solicited by sending an <ESC> (ASCII 27, escape character) as the beginning control character to the printer. A one byte character is returned, flagging the printer status. A 0 signifies the printer is ready to print labels.

### Syntax

<ESC>!?

<u>Parameter</u>	<u>Description</u>
N/A	N/A

<u>Bit (return value )</u>	<u>Status</u>
0	Head opened
1	Paper jam
2	Out of paper
3	Out of ribbon
4	Pause
5	Printing
6	Cover opened (option)

Hex Receive	Printer Status
00	Normal
01	Head opened
02	Paper Jam
03	Paper Jam and head opened
04	Out of paper
05	Out of paper and head opened
08	Out of ribbon
09	Out of ribbon and head opened
0A	Out of ribbon and paper jam
0B	Out of ribbon, paper jam and head opened
0C	Out of ribbon and out of paper
0D	Out of ribbon, out of paper and head opened
10	Pause
20	Printing
80	Other error

### See Also

<ESC>!R

- <ESC>!R

### Description

This command resets the printer. The beginning of the command is an ESCAPE character (ASCII 27). The files downloaded in memory will be deleted. This command cannot be sent in dump mode.

### Syntax

<ESC>!R

<u>Parameter</u>	<u>Description</u>
N/A	N/A

### See Also

<ESC>!?

● ~!@

## Description

This command inquires the mileage of the printer. The integer part of mileage is returned (the decimal part of mileage is not return). to the PC in ASCII characters. The ending character of mileage is 0x0D.

## Syntax

~!@

<u>Parameter</u>	<u>Description</u>
None	N/A

## Example

~!@

## ● ~!A

### Description

This command inquires the free memory of the printer. The number of bytes of free memory is returned in decimal digits, with 0x0d as ending code of PC.

### Syntax

~!A

<u>Parameter</u>	<u>Description</u>
None	N/A

### Example

~!A

### See Also

FILES

## ● ~!C

### Description

This command inquires the presence of Real Time Clock. One byte is return from the printer, indicating whether or not the RTC is installed. This command is only for the firmware before V6.xx.

### Syntax

~!C

<u>Parameter</u>	<u>Description</u>
None	N/A

<u>Return value</u>	<u>Description</u>
0	RTC is not installed.
1	RTC is installed.

### Example

~!C

### See Also

YEAR, MONTH, DATE, WEEK, HOUR, MINUTE, SECOND, @YEAR, @MONTH, @DATE,  
@DAY, @HOUR, @MINUTE, @SECOND

## ● ~!D

### Description

This command enters the printer into DUMP mode. In DUMP mode, the printer outputs code directly without interpretation.

### Syntax

~!D

<u>Parameter</u>	<u>Description</u>
None	N/A

### Example

~!D

## ● ~!F

### Description

This command inquires all about files resident in the printer memory, and fonts installed in the memory module. The filename are returned in ASCII characters. Each file name ends with 0x0D. The ending character is 0x1A. Entering this command multiple times will cycle through the files resident on memory.

### Syntax

~!F

<u>Parameter</u>	<u>Description</u>
None	N/A

### Example

~!F

### See Also

FILES

● ~!!

## Description

The command inquires the code page and country setting of the printer.

## Syntax

~!!

<u>Parameter</u>	<u>Description</u>
None	N/A

The returned information is given in the following format:

**code page, country code**

ex: 8 bit: 437, 001

7 bit: USA, 001

Regarding the code pages and country codes supported by the printer, please refer to the **CODEPAGE** and **COUNTRY** command respectively.

## Example

~!!

## See Also

COUNTRY, CODEPAGE

## ● ~!T

### Description

This command inquires the model name and number of the printer. This information is returned in ASCII characters.

### Syntax

~!T

<u>Parameter</u>	<u>Description</u>
------------------	--------------------

None	N/A
------	-----

Printer Type	Returned String
LB-1000	LB-1000

### Example

~!T

### See Also

~!! , ~!F

## **Message Translation Protocols**

- ~#

### **Description**

The beginning identifier (~#) of the prompt message is sent from the printer to the KP-200 portable keyboard. The ending identifier is ~&.

@0 following the ending identifier ~& is used to instruct keyboard to display the prompt in the first line of LCD display.

@1 following the ending identifier ~& is used to instruct keyboard to display the prompt in the first line of LCD display.

If @0 or @1 are not present, prompt string will be displayed in first line of LCD and input data will be displayed in second line of LCD.

### **Syntax**

~#Prompt~&[@0]  
~#Prompt~&[@1]

<u>Parameter</u>	<u>Description</u>
None	N/A

### **Example**

```
DOWNLOAD "A.BAS"
OUT "~#KP-200~&@0"
OUT "~#Testing~&@1"
EOP
A
```

### **See Also**

INPUT, OUT

## **Commands for Windows Driver**

### **● !B**

#### **Description**

This command stores bitmap image data in the memory. Behind the nnn is the bitmap data.

#### **Syntax**

`!Bnnn`

<u>Parameter</u>	<u>Description</u>
nnn	The number of bytes of image data sent from PC to printer, expressed in 3 decimal digits.

#### **Example**

`!B100`

#### **See Also**

[BITMAP](#)

## ● !J

### Description

This command prints bitmap data at the specified position (in y-direction).

### Syntax

!Jnnnn

<u>Parameter</u>	<u>Description</u>
nnnn	Print image at the specified position in y-direction. The position is expressed in 4 decimal digits.

### Example

!J0100

### See Also

FEED

## ● !N

### Description

This command prints a specified number of labels.

### Syntax

!Nnnn

<u>Parameter</u>	<u>Description</u>
nnn	Specifies the number of copies to be printed.

### Example

!N001

## File Management Commands

### ● DOWNLOAD

#### Description

"DOWNLOAD" is a header of the file that is to be saved in the printer's memory. The downloaded files can be divided into two categories: program files and data files (including text data files, PCX graphic files and bitmap font files) The detailed descriptions regarding the download syntax for different files are as follows:

#### Maximum numbers of file saved in DRAM:

50 files for LB-1000 language printers.

#### Maximum numbers of file saved in Flash memory:

256 files for LB-1000 language desktop printers

Model	Maximum numbers of file saved in		
	DRAM	FLASH	Ext. FLASH
LB-1000	50	256	Depends on SD card capacity

*If "AUTO.BAS" exists in the printer memory, it will be automatically executed upon printer startup. To disable the auto execution function, please follow the procedures below.*

#### For LB-1000 series

Hold the FEED key and power on the switch. The LED color will be changed as following pattern.

Orange → red (5 blinks) → orange (5 blinks) → green (5 blinks) → solid green (for firmware version before V3.37)

Orange → red (5 blinks) → orange (5 blinks) → green (5 blinks) → green and orange (5 blinks) → red and orange (5 blinks) → solid green (V3.37)

Release the FEED key while LED becomes solid green to prevent the printer from running "AUTO.BAS".

#### Syntax

##### 1. Download a program file:

DOWNLOAD [n,] "FILENAME.BAS"

###### Parameter

n

###### Description

Specify memory used to save downloaded files.

*n is ignored:* Download files to DRAM only. If you would like to save the files from DRAM to Flash memory before turning off power, issue the MOVE command to printer.

*F:* Download files to main board flash memory.

*E:* Download files to expansion memory module.

FILENAME.BAS

The filename resident in printer memory.

**Note:**

- (1). **Filenames are case sensitive.**
- (2). **File extensions must be ".BAS"**
- (3). **Filenames must be in 8.3 format.**
- (4). **It should use with EOP command.**
- (5). **If memory is not specified, all files will be downloaded to DRAM.**

**No Battery is used to back up files in DRAM. which will be lost in the event printer power is lost.**

**2. Download a data file:**

DOWNLOAD [n] "FILENAME", DATA SIZE, DATA CONTENT...

<u>Parameter</u>	<u>Description</u>
n	Specify the memory location to save downloaded files. <b>n is ignored:</b> Download files to DRAM only. If you would like to save the files from DRAM to Flash memory before turning off power, issue the MOVE command to printer. <b>F:</b> Download files to main board flash memory. <b>E:</b> Download files to expansion memory module.
FILENAME	The name of data file that will remain resident in the printer memory (case sensitive).
DATA SIZE	The actual size in bytes of the data file (without header)
DATA CONTENT	The data which will be downloaded into printer.

**Note:**

- (1). **For text data files, CR (carriage return) 0x0D and LF (Line Feed) 0x0A is the separator of data.**
- (2). **If memory is not specified, all files will be downloaded to DRAM.**  
**No Battery is used to back up files in DRAM. which will be lost in the event printer power is lost.**

Model	Support			
	DOWNLOAD "filename"	MOVE	DOWNLOAD F,"filename"	DOWNLOAD E,"filename"
LB-1000	X	X	X	X

**Example**

The example program listed below will download to printer SDRAM.

DOWNLOAD "EXAMPLE.BAS"

SIZE 4,4

GAP 0,0

DENSITY 8

SPEED 6

DIRECTION 0

REFERENCE 0,0

SET CUTTER OFF

SET PEEL OFF

CLS

```
TEXT 100,100,"3",0,1,1,"EXAMPLE PROGRAM"
PRINT 1
EOP
```

***Note: When writing a download program, “DOWNLOAD” header must be placed in the beginning of file, and “EOP” must be placed at the end of program.***

***To run the program, call the main filename without BAS extension or use RUN command to start the download program.***

***Example:***

***Call the main filename***

```
C:\>COPY CON LPT1<ENTER>
EXAMPLE<ENTER>
<CTRL><Z>
C:\>
```

***Use Run command to start the program***

```
C:\>COPY CON LPT1<ENTER>
RUN "EXAMPLE.BAS"<ENTER>
<CTRL><Z>
C:\>
```

Below is an example of downloading data file.

```
DOWNLOAD "DATA",20,COMPUTER<Enter>
2001<Enter>
21<Enter>
```

***Note: <ENTER> stands for keyboard “ENTER” key. In the above example, please press “ENTER” key instead of typing <ENTER>***

## See Also

EOP, RUN, PUTBMP, PUTPCX, INPUT

## ● EOP

### Description

End of program. To declare the start and end of BASIC language commands used in a program, DOWNLOAD "FILENAME.BAS" must be added in the first line of the program, and "EOP" statement at the last line of program.

### Syntax

EOP

### Example

```
DOWNLOAD "DEMO.BAS"
SIZE 4,4
GAP 0,0
DENSITY 8
SPEED 6
DIRECTION 0
REFERENCE 0,0
SET CUTTER OFF
SET PEEL OFF
CLS
TEXT 100,100,"3",0,1,1,"DEMO PROGRAM"
PRINT 1
EOP
```

### See Also

DOWNLOAD, EOP, INPUT

## ● FILES

### Description

This command prints out the total memory size, available memory size and files lists (or lists the files through RS-232) in the printer memory (both FLASH memory and DRAM).

### Syntax

FILES

### Example

Follow the steps below to print out (or list through RS-232) files saved in printer memory using the DOS environment through serial port or parallel port connection.

```
C:\>MODE COM1 96,N,8,1<ENTER>
C:\>COPY CON COM1<ENTER>
FILES<ENTER>
<CTRL><Z><ENTER>
C:\>
```

Or

```
C:\>COPY CON LPT1<ENTER>
FILES<ENTER>
<CTRL><Z><ENTER>
```

*Note: <ENTER> stands for PC keyboard “ENTER” key. <CTRL><Z> means to hold PC keyboard “CTRL” key then press the PC keyboard <Z> key.*

### See Also

~!F, KILL

## ● KILL

### Description

This command deletes a file in the printer memory. The wild card (\*) will delete all files resident in specified DRAM or FLASH memory.

Model	Support			
	KILL "/*"	KILL "/*" MOVE	KILL F,"/*"	KILL E,"/*"
LB-1000	X		X	

### Syntax

KILL [n],"FILENAME"

#### Parameter

n

#### Description

Specify the memory location that files will be deleted.

*n is ignored:* Kill files saved in DRAM.

F: Kill files from main board flash memory.

E: Kill files from expansion memory module.

#### *Note:*

(1). If optional parameter n is not specified, firmware will delete the file in DRAM.

#### (2). Syntax example

KILL "FILENAME" : Delete the specify file in DRAM.  
KILL "\*.PCX" : Delete all PCX files in DRAM.  
KILL "/\*" : Delete all files in DRAM.  
KILL F, "FILENAME" : Delete the specify file in FLASH.  
KILL E, "\*.PCX" : Delete all PCX file in extension memory card.

(3). For TSPL printers, please send MOVE command to printer after sending KILL command.

### Example

Users can use printer SELFTEST utility to list printer configurations and files saved in the printer memory, or use the FILES command to print the downloaded file list in printer. Follow the steps below to delete files in the printer memory via parallel port connection.

```
C:\>COPY CON LPT1<ENTER>
FILES<ENTER>
<CTRL><Z><ENTER>
C:\>COPY CON LPT1<ENTER>
KILL "DEMO.BAS " <ENTER>
<CTRL><Z><ENTER>
C:\>COPY CON LPT1<ENTER>
FILES<ENTER>
<CTRL><Z><ENTER>
```

*Note: <ENTER> stands for PC keyboard “ENTER” key. <CTRL><Z> means to hold PC keyboard “CTRL” key then press the PC keyboard <Z> key*

## See Also

~!F, FILES

## ● MOVE

### Description

This command moves downloaded files from DRAM to FLASH memory.

### Syntax

MOVE

<u>Parameter</u>	<u>Description</u>
N/A	N/A

### See Also

DOWNLOAD, EOP

## ● RUN

### Description

This command executes a program resident in the printer memory  
This command is available for TSPL2 language printers only.

### Syntax

RUN "FILENAME.BAS"

Model	Support
LB-1000	X

### Example

```
C:\>COPY CON LPT1<ENTER>
RUN "DEMO.BAS "<ENTER>
<CTRL><Z><ENTER>
C:\>
```

*Note: <ENTER> stands for PC keyboard "ENTER" key. <CTRL><Z> means to hold PC keyboard "CTRL" key then press the PC keyboard <Z> key*

### See Also

DOWNLOAD, EOP

## **BASIC Commands and Functions**

### ● **ABS( )**

#### **Description**

This function returns the absolute value of an integer, floating point or variable.

#### **Syntax**

ABS (VARIABLE)

#### **Example**

```
DOWNLOAD "TEST.BAS"
SIZE 4,4
GAP 0,0
DENSITY 8
SPEED 3
DIRECTION 0
REFERENCE 0,0
SET CUTTER OFF
SET PEEL OFF
CLS
A=ABS(-100)
B=ABS(-50.98)
C=-99.99
TEXT 100,100,"3",0,1,1,STR$(A)
TEXT 100,150,"3",0,1,1,STR$(B)
TEXT 100,200,"3",0,1,1,STR$(ABS(C))
PRINT 1
EOP
```

#### **See Also**

DOWNLOAD, EOP

## ● ASC( )

### Description

This function returns the ASCII code of the character.

### Syntax

ASC ("A")

### Example

```
DOWNLOAD "TEST.BAS"
SIZE 4,4
GAP 0,0
DENSITY 8
SPEED 3
DIRECTION 0
REFERENCE 0,0
SET CUTTER OFF
SET PEEL OFF
CLS
CODE1=ASC("A ")
TEXT 100,100, "3",0,1,1,STR$(CODE1)
PRINT 1
EOP
```

### See Also

DOWNLOAD, EOP, STR\$()

## ● CHR\$( )

### Description

This function returns the character with the specified ASCII code.

### Syntax

CHR\$(n)

<u>Parameter</u>	<u>Description</u>
n	The ASCII code

### Example

```
DOWNLOAD "TEST.BAS"
SIZE 4,4
GAP 0,0
DENSITY 8
SPEED 3
DIRECTION 0
REFERENCE 0,0
SET CUTTER OFF
SET PEEL OFF
CLS
A=65
WORD$=CHR$(A)
TEXT 100,100, "3",0,1,1,WORD$
PRINT 1
EOP
```

### See Also

DOWNLOAD, EOP, STR\$(), ASC\$()

## ● END

### Description

This command states the end of program.

### Syntax

END

### Example

```
DOWNLOAD "DEMO.BAS"
SIZE 4,2
GAP 0,0
DENSITY 8
SPEED 6
DIRECTION 0
REFERENCE 0,0
SET CUTTER OFF
SET PEEL OFF
CLS
TEXT 200,60,"4",0,1,1,"END COMMAND TEST"
X=300
Y=200
X1=500
Y1=400
GOSUB DR_LINE
PRINT 1
END
```

```
:DR_LINE
FOR I=1 TO 100 STEP 10
BOX X+I,Y+I,X1-I,Y1-I,5
NEXT
RETURN
EOP
DEMO
```

### See Also

DOWNLOAD, EOP

## ● EOF( )

### Description

This function is used to detect an opened download file to see whether it has reached the end of file.

### Syntax

EOF (File Handle)

<u>Parameter</u>	<u>Description</u>
File handle	Either 0 or 1.

<u>Return value</u>	<u>Description</u>
None-zero	End of file
0	Not end of file

### Example

```
DOWNLOAD "DATA",16,COMPUTER
2000
DOWNLOAD "DEMO.BAS"
SIZE 3,3
GAP 0.0,0
DENSITY 8
SPEED 4
DIRECTION 0
REFERENCE 0,0
SET CUTTER OFF
SET PEEL OFF
CLS
OPEN "DATA",0
SEEK 0,0
Y=110
TEXT 10,10,"3",0,1,1,"*****EOF TEST*****"
:A
Temp$=""
READ 0,ITEM$,P
TEXT 10,Y,"2",0,1,1,ITEM$+"$"+STR$(P)+"[EOF(0)="+STR$(EOF(0))+"]"
BARCODE 10,Y+25,"39",40,1,0,2,4,"PRICE-"+STR$(P)
Y=Y+100
IF EOF(0)=0 THEN GOTO A
PRINT 1
EOP
DEMO
```

### See Also

DOWNLOAD, EOP, OPEN, READ, SEEK

## ● OPEN

### Description

This command opens a downloaded file and establishes the file handle. Up to two file handles are supported, thus only up to two files can be opened simultaneously. The file to be opened should be downloaded prior to using this command.

When opening a file, the firmware will search automatically to see if the file exists in the on board flash memory or extended memory card. If the file does not exist then the printer will create this file.

## Syntax

OPEN "Filename", File handle

<u>Parameter</u>	<u>Description</u>
Filename	The file downloaded in the printer memory
File handle	Either 0 or 1.

## Example

If a file by the name of "DATA" is to be downloaded,  
The file format contains:

```
DOWNLOAD "DATA1",56,COMPUTER
2000
12
MOUSE
500
13
KEYBOARD
300
100
```

```
DOWNLOAD "DATA2",56,Computer
3000
32
Mouse
900
93
Keyboard
700
700
```

Save the above contents of data under the file name of "DATA". Follow the steps below to download data to the printer

C:\>COPY DATA/B LPT1

If a file by the name of "DEMO.BAS" is to be downloaded, the file format contains:

```
DOWNLOAD "DEMO.BAS"
SIZE 3,1
GAP 0,0
```

```

DENSITY 8
SPEED 4
DIRECTION 0
I=1
Y=100
GOSUB OpenData
:Start
CLS
TEXT 10,10,"3",0,1,1,"*****OPEN COMMAND TEST*****"
ITEM$=""
READ 0,ITEM$,P,Q
TEXT 10,Y,"2",0,1,1,ITEM$+"$"+STR$(P)+"[EOF(0)="+STR$(EOF(0))+"]"
BARCODE 10,Y+25,"39",40,1,0,2,4,"PRICE"+STR$(Q)+"="+STR$(P*Q)
Y=Y+100
PRINT 1
Y=100
IF EOF(0)=1 THEN GOSUB OpenData
IF EOF(0)=0 THEN GOTO Start
END
:OpenData
IF I=1 THEN OPEN "DATA1",0
IF I=2 THEN OPEN "DATA2",0
SEEK 0,0
IF I>2 THEN END
I=I+1
RETURN
EOP
DEMO

```

Saving the above contents of data under the file name of "DEMO".  
Follow the steps below to download data to the printer

<under MS-DOS mode>:  
C:\>COPY DEMO/B LPT1  
Execute DEMO.BAS in printer:  
C:\>COPY CON LPT1  
DEMO  
<Ctrl><Z>

The above example instructs the printer to open the file "DATA1" and "DATA2" with same file handle of 0, and read items from the file.

## See Also

DOWNLOAD, EOP, READ, EOF, LOF, SEEK, FREAD\$()

## ● WRITE

### Description

This command writes data to a downloaded data file. Two files can be open simultaneously, by virtue of printer support for two file handles.

### Syntax

WRITE file handle, variables

<u>Parameter</u>	<u>Description</u>
file handle	0 or 1
variables	string, integer or float point variable

### See Also

READ, DOWNLOAD, EOP, OPEN, EOF, LOF, SEEK, FREAD\$()

## ● READ

### Description

This command reads data from downloaded data file.

### Syntax

READ file handle, variables

<u>Parameter</u>	<u>Description</u>
file handle	0 or 1
variables	string, integer or float point variable

### Example

DOWNLOAD "DATA1",20,COMPUTER

2000

12

DOWNLOAD "DATA2",16,Mouse

900

93

DOWNLOAD "DEMO.BAS"

SIZE 3,1

GAP 0,0

DENSITY 8

SPEED 4

DIRECTION 0

REFERENCE 0,0

SET CUTTER OFF

SET PEEL OFF

I=0

Y=100

OPEN "DATA1",0

OPEN "DATA2",1

SEEK 0,0

SEEK 1,0

:Start

CLS

TEXT 10,10,"3",0,1,1,"\*\*\*\*\*READ COMMAND TEST\*\*\*\*\*"

TEXT 10,50,"3",0,1,1,"OPEN-READ DATA"+STR\$(I+1)

ITEM\$=""

READ I,ITEM\$,P,Q

TEXT 10,Y,"2",0,1,1,ITEM\$+"\$"+STR\$(P)

BARCODE 10,Y+25,"39",40,1,0,2,4,"PRICE"+STR\$(Q)+"="+STR\$(P\*Q)

Y=Y+100

PRINT 1

Y=100

IF I<=1 THEN

```
IF EOF(l)=1 THEN
    l=l+1
    GOTO Start
ELSE
    GOTO Start
ENDIF
ELSE
    END
ENDIF
EOP
DEMO
```

### See Also

[DOWNLOAD](#), [EOP](#), [OPEN](#), [EOF](#), [LOF](#), [SEEK](#), [FREAD\\$\(\)](#)

## ● SEEK

### Description

This command shifts the specified file pointer to a certain position.

### Syntax

SEEK file handle, offset

<u>Parameter</u>	<u>Description</u>
file handle	0 or 1
offset	the offset characters which are shifted to a new position

### Example

DOWNLOAD "DATA",12,1234567890

```
DOWNLOAD "TEST.BAS"
SIZE 3,1
GAP 0,0
DENSITY 8
SPEED 3
DIRECTION 1
REFERENCE 0,0
CLS
OPEN "DATA",0
SEEK 0,4
READ 0,Num$
    TEXT 100,10,"3",0,1,1,"SEEK COMMAND TEST"
    BAR 100,40,300,4
    TEXT 100,60,"3",0,1,1,"SHIFT 4 CHARACTERS"
    TEXT 100,110,"3",0,1,1,Num$
        BAR 100,140,300,4
SEEK 0,0
READ 0,Num$
    TEXT 100,160,"3",0,1,1,"SHIFT 0 CHARACTERS"
    TEXT 100,210,"3",0,1,1,Num$
PRINT 1
EOP
TEST
```

### See Also

DOWNLOAD, EOP, OPEN, READ, EOF, LOF, FREAD\$()

## ● LOF( )

### Description

This function returns the size of the specified file.

### Syntax

LOF ("FILENAME")

<u>Parameter</u>	<u>Description</u>
FILENAME	The file downloaded in the printer memory.

### Example

DOWNLOAD "DATA1",10,1234567890

DOWNLOAD "DATA2",15,ABCDEFGHIJKLMNO

DOWNLOAD "LofTest.BAS"

SIZE 3,3

GAP 0.08,0

DENSITY 8

SPEED 3

DIRECTION 0

REFERENCE 0,0

SET CUTTER OFF

SET PEEL OFF

CLS

OPEN "DATA1",0

OPEN "DATA2",1

TEXT 10,20,"4",0,1,1,"LOF() FUNCTION TEST"

J=LOF("DATA1")

K=LOF("DATA2")

TEXT 10,140,"3",0,1,1,"DATA1 IS: "+STR\$(J)+" Bytes"

TEXT 10,200,"3",0,1,1,"DATA2 IS: "+STR\$(K)+" Bytes"

PRINT 1

EOP

LofTest

### See Also

DOWNLOAD, EOP, OPEN, READ, EOF, SEEK, FREAD\$()

## ● FREAD\$( )

### Description

This function reads a specified number of bytes of data from a file.

### Syntax

FREAD\$ (file handle, byte)

<u>Parameter</u>	<u>Description</u>
file handle	Either 0 or 1
byte	Number of bytes to be read

### Example

DOWNLOAD "DATA1",10,1234567890

DOWNLOAD "DATA2",15,ABCDEFGHIJKLMNO

DOWNLOAD "OPEN2.BAS"

SIZE 3,3

GAP 0.08,0

DENSITY 8

SPEED 3

DIRECTION 0

REFERENCE 0,0

SET CUTTER OFF

SET PEEL OFF

CLS

OPEN "DATA1",0

OPEN "DATA2",1

SEEK 0,0

SEEK 1,0

Y\$=FREAD\$(0,6)

Z\$=FREAD\$(1,6)

TEXT 10,260,"3",0,1,1,"FREAD\$(0,6) IS: "+Y\$

TEXT 10,320,"3",0,1,1,"FREAD\$(1,6) IS: "+Z\$

PRINT 1

EOP

### See Also

DOWNLOAD, EOP, OPEN, READ, EOF, LOF(), SEEK

## ● FOR...NEXT LOOP

### Description

Loop is used to execute one or more lines of program repetitively. A loop counter value specifies the number of executions. Nested loops are allowed (up to 39 nested loops) in this printer. Jumping out in the middle of the FOR...NEXT loop is prohibited.

### Syntax

```
FOR variable = start TO end STEP increment  
    statement; start < end  
NEXT
```

<u>Parameter</u>	<u>Description</u>
variable	The variable name is (up to 8 characters)
start	Integer or floating point numbers
end	Integer or floating point numbers
increment	Integer or floating point, positive or negative.

### Example

```
DOWNLOAD "TEST.BAS"  
SIZE 3,3  
GAP 0.08,0  
DENSITY 8  
SPEED 4  
DIRECTION 1  
CLS  
FOR I=1 TO 10 STEP 1  
    TEXT 100,10+30*(I-1),"3",0,1,1,STR$(I)  
NEXT  
FOR I=1 TO 1000 STEP 100  
    TEXT 200,10+((I-1)/10)*3,"3",0,1,1,STR$(I)  
NEXT  
FOR I=110 TO 10 STEP -10  
    TEXT 300,10+(ABS(I-110))*3,"3",0,1,1,STR$(I)  
NEXT  
FOR I=1 TO 5 STEP 0.5  
    IF I-INT(I)=0 THEN Y=10+60*(I-1) ELSE Y=Y+30  
    TEXT 400,Y,"3",0,1,1,STR$(I)  
NEXT  
PRINT 1  
EOP  
TEST
```

### See Also

DOWNLOAD, EOP

## ● IF...THEN...ELSE...ENDIF   LOOP

### Description

Use IF...THEN block to execute one or more statements conditionally. Either a single-line syntax or multiple-line "block" syntax can be used:

MODEL	Support	
	single-line form	multiple-line form
LB-1000	X	X

### Syntax

IF *condition* THEN *statement*

Note the single-line form of IF ...THEN does not use an ENDIF statement.

Or

IF *condition* THEN  
    *Statements*  
ENDIF

Or

IF *condition* THEN  
    *Statements*  
ELSE  
    *Statements*  
ENDIF

Or

IF *condition 1* THEN  
    *Statement block 1*  
ELSEIF *condition 2* THEN  
    *Statement block 2*  
    . . .  
ELSEIF *condition n* THEN  
    *Statement block n*  
ENDIF

The syntax of IF...THEN...ELSE requires that the command be typed in one single line in less than 255 characters.

#### Parameter

condition  
statement

#### Description

Available relational operator: <, >, =, <=, >=  
Only one statement is available in

### Example

DOWNLOAD "DEMO.BAS"

SIZE 3,3

GAP 0.12,0  
SPEED 4  
DENSITY 8  
DIRECTION 1  
REFERENCE 0,0  
OFFSET 0.00  
SET CUTTER OFF  
SET PEEL OFF  
CLS

A=0  
B=0  
C=0  
D=0  
E=0  
F=0  
G=0  
H=0  
J=0  
K=0  
L=0

FOR I=1 TO 100  
  IF I-INT(I/1)\*1=0 THEN A=A+I  
  IF I-INT(I/2)\*2=1 THEN B=B+I ELSE C=C+I  
  IF I-INT(I/3)\*3=0 THEN  
    D=D+I  
  ENDIF  
  IF I-INT(I/5)\*5=0 THEN  
    E=E+I  
  ELSE  
    F=F+I  
  ENDIF  
  IF I-INT(I/7)\*7=0 THEN  
    G=G+I  
  ELSEIF I-INT(I/17)\*17=0 THEN  
    H=H+I  
  ELSEIF I-INT(I/27)\*27=0 THEN  
    J=J+I  
  ELSEIF I-INT(I/37)\*37=0 THEN  
    K=K+I  
  ELSE  
    L=L+I  
  ENDIF  
NEXT  
TEXT 100,110,"3",0,1,1,"(1) 1+2+3+...+100="+STR\$(A)  
TEXT 100,160,"3",0,1,1,"(2) 1+3+5+...+99="+STR\$(B)  
TEXT 100,210,"3",0,1,1,"(3) 2+4+6+...+100="+STR\$(C)  
TEXT 100,260,"3",0,1,1,"(4) 3+6+9+...+99="+STR\$(D)

```

TEXT 100,310,"3",0,1,1,"(5) 5+10+15+...+100="+STR$(E)
TEXT 100,360,"3",0,1,1,"(1)-(5)="+STR$(F)
TEXT 100,410,"3",0,1,1,"(6) 7+14+21+...+98="+STR$(G)
TEXT 100,460,"3",0,1,1,"(7) 17+34+51+...+85="+STR$(H)
TEXT 100,510,"3",0,1,1,"(8) 27+54+...+81="+STR$(J)
TEXT 100,560,"3",0,1,1,"(9) 37+74="+STR$(K)
TEXT 100,610,"3",0,1,1,"(1)-(6)-(7)-(8)-(9)="+STR$(L)
PRINT 1,1
EOP

```

DOWNLOAD "IFTHEN.BAS"

```

SIZE 4,4
GAP 0,0
DENSITY 8
SPEED 3
DIRECTION 0
REFERENCE 0,0
SET CUTTER OFF
SET PEEL OFF
CLS
A=50
B=5
C$=""
D$=""

```

```

:L1
IF A>100 THEN GOTO L1 ELSE A=A+10
C$=STR$(A)+" IS SMALLER THAN 100"
TEXT 100,10,"4",0,1,1,C$
PRINT 1
END

```

```

:L2
A=A+B
D$=STR$(A)+" IS LARGER THAN 100"
TEXT 100,100,"4",0,1,1,D$
PRINT 1
GOTO L1
EOP

```

**Note:**

*If the result of the expression is nonzero, the statement following THEN will be executed. If the result of the expression is zero, and the statement following the ELSE is present, it will be executed. Otherwise the next line of statement is executed.*

*If there are block of statements in IF...THEN ...ELSE, ENDIF must be used at the end of the IF...THEN ...ELSE statement.*

**Limitations:**

*The total numbers of nested IF ...THEN ...ELSE statement in a program cannot exceed 40.*

*The total numbers of nested IF ...THEN ...ELSE, FOR...NEXT, GOSUB RETURN in a program cannot exceed 40 loops.*

**See Also**

DOWNLOAD, EOP

## ● GOSUB...RETURN

### Description

This command will branch to a subroutine, executing statements until "RETURN" is reached.

### Syntax

```
GOSUB LABEL  
      statement  
END
```

```
:LABEL  
      statement  
RETURN
```

<u>Parameter</u>	<u>Description</u>
LABEL	Beginning of the subroutine. The maximum length of the label is 8 characters.

### Example

```
DOWNLOAD "GOSUB1.BAS"  
SIZE 3,3  
GAP 0,0  
DENSITY 8  
SPEED 4  
DIRECTION 0  
CLS  
TEXT 10,10,"3",0,1,1,"GOSUB & RETURN COMMAND TEST"  
GOSUB DR_BOX  
PRINT 1  
END  
:DR_BOX  
    FOR I=21 TO 81 STEP 10  
        BOX 80+I,80+I,80+300-I,80+300-I,5  
    NEXT  
RETURN  
EOP  
GOSUB1
```

### See Also

DOWNLOAD, EOP, END, GOTO

## ● GOTO

### Description

This command is used to branch to a specified label. The label cannot exceed 8 characters in length.

### Syntax

GOTO LABEL

:LABEL

<u>Parameter</u>	<u>Description</u>
LABEL	Beginning of the point. The maximum length of the label is 8 characters.

### Example

```
DOWNLOAD "GOTO1.BAS"
SIZE 3,3
GAP 0.08,0
DENSITY 8
SPEED 4
DIRECTION 1
REFERENCE 0,0
SET CUTTER OFF
SET PEEL OFF
CLS
A=0
TOTAL=0
:START
    IF A<100 THEN
        GOTO SUM
    ELSE
        GOTO PRTOUT
    ENDIF
:SUM
    A=A+1
    TOTAL=TOTAL+A
    GOTO START
:PRTOUT
    B$="THE SUMMATION OF 1..100 IS "+STR$(TOTAL)
    TEXT 10,100,"3",0,1,1,B$
    PRINT 1
END
EOP
```

### See Also

DOWNLOAD, EOP, END, GOSUB...RETURN

## ● INP\$( )

### Description

One byte is received from a serial port through this function.

### Syntax

INP\$(n)

<u>Parameter</u>	<u>Description</u>
n	1: com1 port in printer

### Example

```
DOWNLOAD "DEMO.BAS"
SIZE 3,3
GAP 0,0
DENSITY 8
SPEED 3
DIRECTION 0
REFERENCE 0,0
SET CUTTER OFF
SET PEEL OFF
CLS
T$=""
FOR I=1 TO 5
    T$=T$+INP$(1)
NEXT
TEXT 100,100,"4",0,1,1,"INP$(1)="+T$
PRINT 1
EOP
DEMO
12345
```

### See Also

DOWNLOAD, EOP, END, INPUT, GOSUB...RETURN, GOTO

## ● INPUT

### Description

This command receives data through serial port. This command is used with portable keyboard KP-200.

### Syntax

INPUT ["Prompt string", number of digits], variables

The comma also can be replaced by semicolon, such as:

INPUT ["Prompt string"; number of digits]; variables

Parameter	Description
Prompt string	The prompt string is shown on keyboard LCD screen. The maximum length of prompt string is 20 characters.
Number of digits	Maximum number of characters is 255.
Variables	The variable to receive input data.

### Example

```
DOWNLOAD "INPUT1.BAS"
SIZE 3,3
GAP 0.08,0
DENSITY 8
SPEED 4
DIRECTION 0
REFERENCE 0,0
SET CUTTER OFF
SET PEEL OFF

:START
    INPUT "CODE 39 : ",C39$
    INPUT "EAN 13:",12,E13$
    CLS
    A$=""
    TEXT 20,50,"3",0,1,1,"INPUT and KP-200 Test"
    BARCODE 20,100,"39",48,1,0,2,5,C39$
    BARCODE 20,200,"EAN13",48,1,0,4,4,E13$
    PRINT 1
GOTO START
EOP
```

### See Also

DOWNLOAD, EOP, END, GOTO

## ● REM

### Description

Comment. Prefix is "REM", which will be ignored by the printer.

### Syntax

REM

### Example

```
REM ****
REM This is a demonstration program*
REM ****
DOWNLOAD "REMARK.BAS"
SIZE 3,3
GAP 0.08,0
DENSITY 8
SPEED 4
DIRECTION 1
REFERENCE 0,0
SET CUTTER OFF
SET PEEL OFF
CLS
TEXT 50,50,"3",0,1,1,"REMARK DEMO PROGRAM"
REM TEXT 50,100,"3",0,1,1,"REMARK DEMO PROGRAM"
PRINT 1,1
EOP
```

### See Also

DOWNLOAD, EOP, END

## ● OUT

### Description

This command sends data through the printer serial port.

### Syntax

OUT "prompt", variable

<u>Parameter</u>	<u>Description</u>
prompt	Prompt which is shown on LCD screen.
variable	The output message.

### Example

```
DOWNLOAD "DEMO.BAS"
SIZE 3,3
GAP 0.08,0
DENSITY 8
SPEED 4
DIRECTION 0
REFERENCE 0,0
SET CUTTER OFF
SET PEEL OFF
CLS
PRICE$="123456"
OUT "PRICE:",PRICE$
EOP
```

### See Also

DOWNLOAD, EOP, END, ~#...~&

## ● GETKEY( )

### Description

This command is used to get the status of the PAUSE and FEED keys. This command waits until either key is pressed, whereupon 0 is returned if PAUSE key is pressed and 1 is returned if FEED key is pressed.

### Syntax

GETKEY()

Model	PAUSE	FEED
LB-1000	0	1

### Example

```
DOWNLOAD "DEMO4.BAS"
SIZE 4,4
GAP 0,0
CLS
:START
    A=GETKEY()
    IF A=0 THEN GOTO PAUSEB
    IF A=1 THEN GOTO FEEDB
:PAUSEB
    CLS
    TEXT 50,10,"4",0,1,1,"PAUSE key is pressed !"
    PRINT 1
    GOTO START
:FEEDB
    CLS
    TEXT 50,10,"4",0,1,1,"FEED key is pressed !"
    PRINT 1
EOP
```

### See Also

DOWNLOAD, EOP, END, GOTO

## ● INT( )

### Description

This function truncates a floating point number.

### Syntax

INT (n)

<u>Parameter</u>	<u>Description</u>
n	positive or negative integer, floating point number or mathematical expression.

### Example

```
DOWNLOAD "DEMO.BAS"
SIZE 4,2
GAP 0,0
DENSITY 8
SPEED 3
DIRECTION 0
REFERENCE 0,0
SET CUTTER OFF
SET PEEL OFF
INPUT "Number:",Num
CLS
REM **** To round up or down****
N=INT(Num+0.5)
IF N>Num THEN
    TEXT 50,100,"3",0,1,1,"To round up= "+STR$(N)
ELSE
    TEXT 50,100,"3",0,1,1,"To round down= "+STR$(N)
ENDIF
PRINT 1
EOP
```

### See Also

DOWNLOAD, EOP, END, ABS(), ASC(), STR\$()

## ● LEFT\$( )

### Description

This function returns the specified number of characters down from the initial character of a string.

### Syntax

LEFT\$ (X\$, n)

<u>Parameter</u>	<u>Description</u>
X\$	The string to be processed
n	The number of characters to be returned

### Example

```
DOWNLOAD "STR1.BAS"
SIZE 3.00,3.00
GAP 0.08,0.00
SPEED 4.0
DENSITY 8
SET CUTTER OFF
DIRECTION 0
REFERENCE 0,0
A$="BARCODE PRINTER DEMO PRINTING"
C$=LEFT$(A$,10)
CLS
TEXT 10,10,"3",0,1,1,A$
TEXT 10,100,"3",0,1,1,"10 LEFT 10 CHARS: "+C$
PRINT 1
EOP
```

### See Also

DOWNLOAD, EOP, END, RIGHT\$(), MID\$(), LEN(), STR\$()

## ● LEN( )

### Description

This function returns the length of a string.

### Syntax

LEN (string)

<u>Parameter</u>	<u>Description</u>
string	The string whose length is to be measured. .

### Example

```
DOWNLOAD "DEMO.BAS"
SIZE 3.00,3.00
GAP 0.08,0.00
SPEED 4.0
DENSITY 8
SET CUTTER OFF
DIRECTION 0
REFERENCE 0,0
A$="TSC Auto ID Technology Co., Ltd."
B=LEN(A$)
CLS
TEXT 10,10,"3",0,1,1,A$
TEXT 10,50,"3",0,1,1,"STRING LENGTH="+STR$(B)
PRINT 1
EOP
```

### See Also

DOWNLOAD, EOP, END, LEFT\$(), LEN(), RIGHT\$(), MID\$(), STR\$(), VAL()

## ● MID\$( )

### Description

This function retrieves the specified number of characters down from the *m*th character of a string.

### Syntax

MID\$(string, m, n)

<u>Parameter</u>	<u>Description</u>
string	The string to be processed.
m	The beginning of <i>m</i> th characters in the string. $1 \leq m \leq$ string length
n	The number of characters to return.

### Example

```
DOWNLOAD "DEMO.BAS"
SIZE 3.00,3.00
GAP 0.08,0.00
SPEED 4.0
DENSITY 8
SET CUTTER OFF
DIRECTION 0
REFERENCE 0,0
A$="TSC Auto ID Technology Co., Ltd."
E$=MID$(A$,11,10)
CLS
TEXT 10,10,"3",0,1,1,A$
TEXT 10,200,"3",0,1,1,"10 MIDDLE CHARS: "+E$
PRINT 1
EOP
```

### See Also

DOWNLOAD, EOP, END, LEFT\$( ), LEN(), RIGHT\$( ), STR\$( ), VAL()

## ● **RIGHT\$( )**

### **Description**

This function returns a specified number of characters up from the end of a string.

### **Syntax**

RIGHT\$ (X\$, n)

<u>Parameter</u>	<u>Description</u>
X\$	The string to be processed
n	The number of characters to be returned from the right side (end) of the string

### **Example**

```
DOWNLOAD "DEMO.BAS"
SIZE 3.00,3.00
GAP 0.08,0.00
SPEED 4.0
DENSITY 8
SET CUTTER OFF
DIRECTION 0
REFERENCE 0,0
A$="TSC Auto ID Technology Co., Ltd."
D$=RIGHT$(A$,10)
CLS
TEXT 10,10,"3",0,1,1,A$
TEXT 10,150,"3",0,1,1,"10 RIGHT CHARS: "+D$
PRINT 1
EOP
```

### **See Also**

DOWNLOAD, EOP, END, LEFT\$(), LEN(), MID\$(), STR\$(), VAL()

## ● STR\$( )

### Description

This function converts a specified value or expression into corresponding string of characters.

### Syntax

STR\$ (n)

<u>Parameter</u>	<u>Description</u>
n	An integer, floating point number or mathematical expression

### Example

```
DOWNLOAD "DEMO.BAS"
SIZE 3.00,3.00
GAP 0,0.00
SPEED 4.0
DENSITY 8
SET CUTTER OFF
DIRECTION 0
REFERENCE 0,0
A$="TSC Auto ID Technology Co., Ltd."
F=100
G=500
H$=STR$(F+G)
CLS
TEXT 10,10,"3",0,1,1,A$
TEXT 10,60,"3",0,1,1,"F="+STR$(F)
TEXT 10,110,"3",0,1,1,"G="+STR$(G)
TEXT 10,160,"3",0,1,1,"F+G="+H$
PRINT 1
EOP
DEMO
```

### See Also

DOWNLOAD, EOP, END, LEFT\$(), LEN(), RIGHT\$(), MID\$(), VAL()

## ● STRCOMP( )

### Description

Returns -1, 0, or 1, based on the result of a string comparison.

### Syntax

STRCOMP (str1\$, str2\$ [, comp] )

<u>Parameter</u>	<u>Description</u>
str1\$	Required. Any valid string expression.
str2\$	Required. Any valid string expression.
comp	Optional. Specifies the type of string comparison. 0: Binary comparison. Default. 1: Textual comparison. The comparison is case-insensitive.

Condition	Return value
str1\$ sorts ahead of str2\$	-1
str1\$ is equal to str2\$	0
str1\$ sorts after str2\$	1

### Example

```
DOWNLOAD "TEST.BAS"
STR1$ = "ABCD"
STR2$ = "abcd"

SIZE 4,1
GAP 0,0
CLS
TEXT 100,10,"3",0,1,1,STR$(result2) + ":" + STR1$ + " sorts before " + STR2$
TEXT 100,60,"3",0,1,1,STR$(result1) + ":" + STR1$ + " and " + STR2$ + " sort equally"
TEXT 100,110,"3",0,1,1,STR$(result3) + ":" + STR2$ + " sorts after " + STR1$
PRINT 1
EOP
TEST
```

### See Also

INSTR()

## ● INSTR ( )

### Description

Returns an integer specifying the start position of the first occurrence of one string within another.

### Syntax

INSTR ([start,] str1\$, str2\$)

<u>Parameter</u>	<u>Description</u>
start	Optional. Numeric expression that sets the starting position for each search. If omitted, search begins at the first character position. The start index is 1 - based.
str1\$	Required. String expression being searched.
str2\$	Required. String expression sought.

### Example

```
DOWNLOAD "DEMO.BAS"
string$ = "ABC123ABC123"
searchfor$ = "123"
starpos = 8
```

```
temp1 = INSTR(string$,searchfor$)
temp2 = INSTR(starpos,string$,searchfor$)
```

```
str1$ = searchfor$+" in "+string$+" is "+ STR$(temp1)
str2$ = searchfor$+" in "+string$+" after "+ STR$(starpos) + " is "+ STR$(temp2)
```

```
SIZE 4,1
GAP 0,0
CLS
TEXT 10,10,"3",0,1,1,str1$
TEXT 10,60,"3",0,1,1,str2$
PRINT 1
EOP
DEMO
```

### See Also

STRCOMP()

## ● TRIM\$( )

### Description

Removes both leading and trailing blank spaces or specific characters from a string.

### Syntax

TRIM\$ (str\$ [, list\$])

<u>Parameter</u>	<u>Description</u>
str\$	The string that will be trimmed.
list\$	Optional. The characters that will be removed.

### Example

```
DOWNLOAD "DEMO.BAS"
data1$=" 1234567 "
data2$="a1234567a"
data3$="<12345>"

SIZE 4,1.5
GAP 0,0
CLS
TEXT 50,025,"2",0,1,1,LTRIM$(data1$)
TEXT 50,050,"2",0,1,1,TRIM$(data1$)
TEXT 50,075,"2",0,1,1,RTRIM$(data1$)
TEXT 50,100,"2",0,1,1,LTRIM$(data2$,"a")
TEXT 50,125,"2",0,1,1,TRIM$(data2$,"a")
TEXT 50,150,"2",0,1,1,RTRIM$(data2$,"a")
TEXT 50,175,"2",0,1,1,LTRIM$(data3$,"[<>]")
TEXT 50,200,"2",0,1,1,TRIM$(data3$,"[<>]")
TEXT 50,225,"2",0,1,1,RTRIM$(data3$,"[<>]")
PRINT 1
EOP
DEMO
```

### See Also

LTRIM\$, RTRIM\$()

## ● LTRIM\$( )

### Description

Removes leading blank space from a string.

### Syntax

LTRIM\$ (str\$ [, list\$])

<u>Parameter</u>	<u>Description</u>
str\$	The string that will be trimmed.
list\$	Optional. The characters that will be removed.

### Example

```
DOWNLOAD "DEMO.BAS"
data1$=" 1234567 "
data2$="a1234567a"
data3$="<12345>"

SIZE 4,1.5
GAP 0,0
CLS
TEXT 50,025,"2",0,1,1,LTRIM$(data1$)
TEXT 50,050,"2",0,1,1,TRIM$(data1$)
TEXT 50,075,"2",0,1,1,RTRIM$(data1$)
TEXT 50,100,"2",0,1,1,LTRIM$(data2$,"a")
TEXT 50,125,"2",0,1,1,TRIM$(data2$,"a")
TEXT 50,150,"2",0,1,1,RTRIM$(data2$,"a")
TEXT 50,175,"2",0,1,1,LTRIM$(data3$,"[<>]")
TEXT 50,200,"2",0,1,1,TRIM$(data3$,"[<>]")
TEXT 50,225,"2",0,1,1,RTRIM$(data3$,"[<>]")
PRINT 1
EOP
DEMO
```

### See Also

TRIM\$(), RTRIM\$()

## ● RTRIM\$( )

### Description

Removes trailing blank space from a string.

### Syntax

RTRIM\$ (str\$ [, list\$])

<u>Parameter</u>	<u>Description</u>
str\$	The string that will be trimmed.
list\$	Optional. The characters that will be removed.

### Example

```
DOWNLOAD "DEMO.BAS"
data1$=" 1234567 "
data2$="a1234567a"
data3$="<12345>"

SIZE 4,1.5
GAP 0,0
CLS
TEXT 50,025,"2",0,1,1,LTRIM$(data1$)
TEXT 50,050,"2",0,1,1,TRIM$(data1$)
TEXT 50,075,"2",0,1,1,RTRIM$(data1$)
TEXT 50,100,"2",0,1,1,LTRIM$(data2$,"a")
TEXT 50,125,"2",0,1,1,TRIM$(data2$,"a")
TEXT 50,150,"2",0,1,1,RTRIM$(data2$,"a")
TEXT 50,175,"2",0,1,1,LTRIM$(data3$,"[<>]")
TEXT 50,200,"2",0,1,1,TRIM$(data3$,"[<>]")
TEXT 50,225,"2",0,1,1,RTRIM$(data3$,"[<>]")
PRINT 1
EOP
DEMO
```

### See Also

[TRIM\\$\(\)](#), [LTRIM\\$\(\)](#)

## ● VAL( )

### Description

This function converts numeric characters into corresponding integer or floating point number.

### Syntax

VAL ("numeric character")

<u>Parameter</u>	<u>Description</u>
numeric character	"0~9", ":"

### Example

```
DOWNLOAD "DEMO.BAS"
SIZE 3.00,3.00
GAP 0.00,0.00
SPEED 4.0
DENSITY 8
SET CUTTER OFF
DIRECTION 0
REFERENCE 0,0
A$="TSC Auto ID Technology Co., Ltd."
F$="100"
G$="500"
CLS
H=VAL(F$)+VAL(G$)
I$=STR$(H)
TEXT 10,10,"3",0,1,1,A$
TEXT 10,60,"3",0,1,1,"F="+F$
TEXT 10,110,"3",0,1,1,"G="+G$
TEXT 10,160,"3",0,1,1,"F+G="+I$
PRINT 1
EOP
DEMO
```

### See Also

DOWNLOAD, EOP, END, LEFT\$(), LEN(), RIGHT\$(), MID\$(), STR\$()

## ● BEEP

### Description

This command issues a beep sound on portable keyboard. Printer sends the string 0x07 to KP-200 portable keyboard.

### Syntax

BEEP

<u>Parameter</u>	<u>Description</u>
None	N/A

### Example

```
DOWNLOAD "DEMO.BAS"
SIZE 4,4
GAP 0,0
DENSITY 8
SPEED 6
DIRECTION 0
REFERENCE 0,0
SET CUTTER OFF
SET PEEL OFF
BEEP
INPUT "Text1 =",TEXT1$
CLS
TEXT 100,100,"3",0,1,1,TEXT1$
PRINT 1
EOP
```

## ● NOW\$( )

### Description

Returns the current date and time according to the setting of your printer.

### Syntax

NOW\$( )

<u>Parameter</u>	<u>Description</u>
None	N/A

*Note: It is supported in firmware V6.81EZ or later.*

### Example

```
DOWNLOAD "DEMO.BAS"
SIZE 4,4
GAP 0,0
DENSITY 8
SPEED 6
DIRECTION 0
REFERENCE 0,0
SET CUTTER OFF
SET PEEL OFF
CLS
TEXT 100,100,"3",0,1,1,"Now is " + NOW$( )
PRINT 1
EOP
```

## ● FORMAT\$( )

### Description

Returns the current date and time according to the setting of your printer.

### Syntax

FORMAT\$(expression [, style\$] )

#### Parameter

expression

#### Description

Required. Any valid expression.

style\$

Optional. A valid named or user-defined format string expression.

Predefined date/time format	Description
General Date	Shows date and time.
Long Date	Uses the Long Date format.
Medium Date	Uses the dd-mmm-yy format.
Short Date	Uses the Short Date format.
Long Time	Shows the hour, minute, second, and "AM" or "PM" using the h:mm:ss format.
Medium Time	Shows the hour, minute, and "AM" or "PM" using the "hh:mm AM/PM" format.
Short Time	Shows the hour and minute using the hh:mm format.

User-defined date/time formats	Description
c	Display the date as dddd and display the time as tttt, in that order.
d	Display the day as a number without a leading zero (1 - 31).
dd	Display the day as a number with a leading zero (01 - 31).
ddd	Display the day as an abbreviation (Sun - Sat).
dddd	Display the day as a full name (Sunday - Saturday).
dddddd	Display a date serial number as a complete date (including day, month, and year), formatted according to your system's short date format setting. The default short date format is m/d/yyyy.
ddddddd	Display the date as a complete date (including day, month, and year), formatted according to the long date setting recognized by your system. The default long date format is dddd, mmmm dd, yyyy.
w	Display the day of the week as a number (1 for Sunday through 7 for Saturday).
ww	Display the week of the year as a number (1 - 53).
m	Display the month as a number without a leading zero (1 - 12). If m immediately follows h or hh, the minute rather than the month is displayed.
mm	Display the month as a number with a leading zero (01 - 12). If mm immediately follows h or hh, the minute rather than the month is displayed.
mmm	Display the month as an abbreviation (Jan - Dec).
mmmm	Display the month as a full month name (January - December).
q	Display the quarter of the year as a number (1 - 4).
y	Display the day of the year as a number (1 - 366).
yy	Display the year as a 2-digit number (00 - 99).
yyy	Display the year as a 4-digit number (100 - 9999).
h	Display the hour as a number without leading zeros (0 - 23).
hh	Display the hour as a number with leading zeros (00 - 23).
n	Display the minute as a number without leading zeros (0 - 59).
nn	Display the minute as a number with leading zeros (00 - 59).
s	Display the second as a number without leading zeros (0 - 59).
ss	Display the second as a number with leading zeros (00 - 59).
tttt	Display a time as a complete time (including hour, minute, and second). The default time format is h:mm:ss AM/PM.
AM/PM	Display an uppercase AM with any hour before noon; display an uppercase PM with any hour between noon and 11:59 P.M.
am/pm	Display a lowercase AM with any hour before noon; display a lowercase PM with any hour between noon and 11:59 P.M.
A/P	Display an uppercase A with any hour before noon; display an uppercase P with any hour between noon and 11:59 P.M.
a/p	Display a lowercase A with any hour before noon; display a lowercase P with any hour between noon and 11:59 P.M.
AMPM	AMPM can be either uppercase or lowercase, but the case of the string displayed matches the string as defined by your system settings.
\	Display the next character in the format string.
"string"	Display the string inside the double quotation marks.

**Note:** It is supported in firmware V6.81EZ or later.

## Example

```
SIZE 800 dot, 1900 dot
GAP 0,0
CLS
TEXT 10,10,"3",0,1,1,"General Date:" + FORMAT$(NOW$(), "General Date")
TEXT 10,60,"3",0,1,1,"Long Date:" + FORMAT$(NOW$(), "Long Date")
TEXT 10,110,"3",0,1,1,"Medium Date:" + FORMAT$(NOW$(), "Medium Date")
TEXT 10,160,"3",0,1,1,"Short Date:" + FORMAT$(NOW$(), "Short Date")
TEXT 10,210,"3",0,1,1,"Long Time:" + FORMAT$(NOW$(), "Long Time")
TEXT 10,260,"3",0,1,1,"Medium Time:" + FORMAT$(NOW$(), "Medium Time")
TEXT 10,310,"3",0,1,1,"Short Time:" + FORMAT$(NOW$(), "Short Time")
TEXT 10,360,"3",0,1,1,"c:" + FORMAT$(NOW$(), "c")
TEXT 10,410,"3",0,1,1,"d:" + FORMAT$(NOW$(), "d")
TEXT 10,460,"3",0,1,1,"dd:" + FORMAT$(NOW$(), "dd")
TEXT 10,510,"3",0,1,1,"ddd:" + FORMAT$(NOW$(), "ddd")
TEXT 10,560,"3",0,1,1,"dddd:" + FORMAT$(NOW$(), "dddd")
TEXT 10,610,"3",0,1,1,"ddddd:" + FORMAT$(NOW$(), "ddddd")
TEXT 10,660,"3",0,1,1,"ddddddd:" + FORMAT$(NOW$(), "ddddddd")
TEXT 10,710,"3",0,1,1,"w:" + FORMAT$(NOW$(), "w")
TEXT 10,760,"3",0,1,1,"ww:" + FORMAT$(NOW$(), "ww")
TEXT 10,810,"3",0,1,1,"m:" + FORMAT$(NOW$(), "m")
TEXT 10,860,"3",0,1,1,"mm:" + FORMAT$(NOW$(), "mm")
TEXT 10,910,"3",0,1,1,"mmm:" + FORMAT$(NOW$(), "mmm")
TEXT 10,960,"3",0,1,1,"mmmm:" +FORMAT$(NOW$(), "mmmm")
TEXT 10,1010,"3",0,1,1,"q:" + FORMAT$(NOW$(), "q")
TEXT 10,1060,"3",0,1,1,"y:" + FORMAT$(NOW$(), "y")
TEXT 10,1110,"3",0,1,1,"yy:" + FORMAT$(NOW$(), "yy")
TEXT 10,1160,"3",0,1,1,"yyyy:" + FORMAT$(NOW$(), "yyyy")
TEXT 10,1210,"3",0,1,1,"h:" + FORMAT$(NOW$(), "h")
TEXT 10,1260,"3",0,1,1,"hh:" + FORMAT$(NOW$(), "hh")
TEXT 10,1310,"3",0,1,1,"n:" + FORMAT$(NOW$(), "n")
TEXT 10,1360,"3",0,1,1,"nn:" + FORMAT$(NOW$(), "nn")
TEXT 10,1410,"3",0,1,1,"s:" + FORMAT$(NOW$(), "s")
TEXT 10,1460,"3",0,1,1,"ss:" +FORMAT$(NOW$(), "ss")
TEXT 10,1510,"3",0,1,1,"tttt:" + FORMAT$(NOW$(), "tttt")
TEXT 10,1560,"3",0,1,1,"AM/PM:" + FORMAT$(NOW$(), "AM/PM")
TEXT 10,1610,"3",0,1,1,"am/pm:" + FORMAT$(NOW$(), "am/pm")
TEXT 10,1660,"3",0,1,1,"A/P:" + FORMAT$(NOW$(), "A/P")
TEXT 10,1710,"3",0,1,1,"a/p:" + FORMAT$(NOW$(), "a/p")
TEXT 10,1760,"3",0,1,1,"AMPM:" + FORMAT$(NOW$(), "AMPM")
TEXT 10,1810,"3",0,1,1,"\" + FORMAT$(NOW$(), "To\day \s dddd")
TEXT 10,1860,"3",0,1,1,"string:" + FORMAT$(NOW$(), "To\day \s dddd")
PRINT 1
```

## Device Reconfiguration Commands

### ● SET COUNTER

#### Description

Counters can be a real counter or a variable. This setting sets the counter number in the program and its increments. There are three different types of counters: digit (0~9~0), lower case letter (a~z~a) or upper case letter (A~Z~A).

#### Syntax

SET COUNTER @n step

@n = "Expression"

<u>Parameter</u>	<u>Description</u>
@n	n: counter number. There are 51 counters available (@0~@50) in the printer.
step	The increment of the counter, can be positive or negative. -999999999 <= step <= 999999999 <i>If the counter is used as a fixed variable, please set the increment to 0.</i>
Expression	Initial string. String length is 101 bytes

#### Example

```
SIZE 3,3
GAP 0,0
DENSITY 8
SPEED 6
DIRECTION 0
REFERENCE 0,0
SET COUNTER @1 1
@1="00001"
SET COUNTER @2 5
@2="AB000001"
CLS
TEXT 50,50,"3",0,1,1,@1
BARCODE 50,100,"39",48,1,0,2,4,@2
PRINT 2,1
```

#### See Also

PRINT, TEXT, BARCODE

## ● SET CUTTER

### Description

This setting activates or deactivates the cutter and defines how many printed labels is to be cut at one time. This setting will be saved in printer memory after turning off the power.

### Syntax

SET CUTTER OFF/BATCH/pieces

<u>Parameter</u>	<u>Description</u>
OFF	Disable cutter function.
BATCH	Set printer to cut label at the end of printing job.
Pieces	Set number of printing labels per cut. 0<= pieces <=65535

### Example

```
REM ***SET CUTTER FUNCTION OFF EXAMPLE PROGRAM***  
SIZE 3,3  
GAP 0,0  
DENSITY 8  
SPEED 6  
DIRECTION 0  
REFERENCE 0,0  
SET CUTTER OFF  
SET PEEL OFF  
CLS  
TEXT 50,50,"3",0,1,1,"SET CUTTER OFF"  
PRINT 3  
REM ***This program cuts once at the batch***  
SET CUTTER BATCH  
CLS  
TEXT 50,50,"3",0,1,1,"SET CUTTER BATCH"  
PRINT 3,2  
REM ***This program cuts every label***  
SET CUTTER 1  
CLS  
TEXT 50,50,"3",0,1,1,"SET CUTTER 1"  
PRINT 3,2  
REM ***This program cuts 2 label***  
SET CUTTER 2  
CLS  
TEXT 50,50,"3",0,1,1,"SET CUTTER 2"  
PRINT 3,2
```

### See Also

OFFSET, PRINT, SET PARTIAL\_CUTTER

## ● SET PARTIAL\_CUTTER

### Description

This setting activates or deactivates the cutter and defines how many printed labels is to be cut at one time. This setting will be saved in printer memory after turning off the power.

This function prevents label back feeding after a cut.

### Syntax

SET PARTIAL\_CUTTER OFF/BATCH/pieces

<u>Parameter</u>	<u>Description</u>
OFF	Disable cutter function.
BATCH	Set printer to cut label at the end of printing job.
Pieces	Set number of printing labels per cut. 0<= pieces <=65535

Model	Support
LB-1000	X

### Example

```
REM **SET PARTIAL_CUTTER FUNCTION OFF EXAMPLE PROGRAM**
SIZE 3,1
GAP 0,0
DENSITY 8
SPEED 6
DIRECTION 0
REFERENCE 0,0
SET PARTIAL_CUTTER OFF
CLS
TEXT 50,50,"3",0,1,1,"SET PARTIAL_CUTTER OFF"
PRINT 3
REM ***This program cuts once at the batch***
SET PARTIAL_CUTTER BATCH
CLS
TEXT 50,50,"3",0,1,1,"SET PARTIAL_CUTTER BATCH"
PRINT 3,2
REM ***This program cuts every label***
SET PARTIAL_CUTTER 1
CLS
TEXT 50,50,"3",0,1,1,"SET PARTIAL_CUTTER 1"
PRINT 3,2
REM ***This program cuts 2 label***
SET PARTIAL_CUTTER 2
CLS
TEXT 50,50,"3",0,1,1,"SET PARTIAL_CUTTER 2"
PRINT 3,2
```

### See Also

OFFSET, PRINT, SET CUTTER

## ● SET BACK

### Description

This setting is used after SET CUTTER function. This function prevents label backfeeding after a cut.

### Syntax

SET BACK OFF/ON

Model	Support
LB-1000	X

<u>Parameter</u>	<u>Description</u>
OFF	Disable back function.
ON	Enable back function.

### Example

```
REM **SET BACK FUNCTION OFF EXAMPLE PROGRAM**
SIZE 3,1
GAP 0,0
DENSITY 8
SPEED 6
DIRECTION 1
REFERENCE 0,0
SET CUTTER 1
SET BACK OFF
CLS
TEXT 50,50,"3",0,1,1,"SET BACK OFF"
PRINT 3
CLS
SET CUTTER 1
SET BACK ON
TEXT 50,50,"3",0,1,1,"SET BACK ON"
PRINT 3
```

### See Also

OFFSET, PRINT, SET CUTTER

## ● SET KEY1, SET KEY2, SET KEY3

### Description

This setting is used to enable/disable the KEY1/KEY2/KEY3 function. The default function of KEY1 is "MENU" key, KEY2 is "PAUSE" key and KEY3 is "FEED" key. Before setting KEY1/KEY2/KEY3 function, please disable KEY1/KEY2/KEY3 first. The setting will remain resident in the printer even when the printer is powered off.

### Syntax

```
SET KEY1 ON/OFF  
SET KEY2 ON/OFF  
SET KEY3 ON/OFF
```

<u>Parameter</u>	<u>Description</u>
ON	Enable KEYn function
OFF	Disable KEYn function

Model	KEY0	KEY1	KEY2	KEY3	KEY4	KEY5	KEY6
LB-1000		PAUSE	FEED				

### Example

```
DOWNLOAD "DEMO.BAS"  
SIZE 3,1  
GAP 0,0  
DENSITY 8  
SPEED 3  
DIRECTION 0  
REFERENCE 0,0  
SET CUTTER OFF  
SET KEY1 OFF  
SET KEY2 OFF  
SET KEY3 OFF  
KEY1=0  
KEY2=0  
KEY3=0  
  
:START  
IF KEY1=1 THEN  
    CLS  
    TEXT 100,10,"3",0,1,1,"KEY1 (MENU key) is pressed!!"  
    PRINT 1,1  
ELSEIF KEY2=1 THEN  
    CLS  
    TEXT 100,10,"3",0,1,1,"KEY2 (PAUSE key) is pressed!!"  
    PRINT 1,1  
ELSEIF KEY3=1 THEN  
    CLS  
    TEXT 100,10,"3",0,1,1,"KEY3 (FEED key) is pressed!!"
```

```
TEXT 100,60,"3",0,1,1,"End of test"
PRINT 1,1
SET KEY1 ON
SET KEY2 ON
SET KEY3 ON
END
ENDIF
GOTO START
EOP
DEMO
```

### See Also

OFFEST, PRINT

## ● SET LED1, SET LED2, SET LED3

### Description

This setting is used to control LED on/off function.

### Syntax

SET LED1 ON/OFF  
SET LED2 ON/OFF  
SET LED3 ON/OFF

<u>LED no.</u>	<u>Default Function</u>
LDE1	Power on/off
LED2	Printer on-line/off-line
LED3	Error/normal

<u>Parameter</u>	<u>Description</u>
ON	Enable LED $n$ function
OFF	Disable LED $n$ function

The default function of LED1, LED2 and LED3 is as listed below:

Model	LED1	LED2	LED3	LED2 & LED3
LB-1000	GREEN	GREEN	RED	ORANGE

### Example

```
DOWNLOAD "DEMO4.BAS"
SET LED1 OFF
SET LED2 OFF
SET LED3 OFF
FOR I=1 TO 100
    LED1=0
    LED2=0
    LED3=0
    IF I-INT(I/2)*2=0 THEN
        LED1=1
    ELSEIF I-INT(I/3)*3=0 THEN
        LED2=1
    ELSE
        LED3=1
    ENDIF
NEXT
LED1=1
LED2=1
LED3=0
SET LED1 ON
SET LED2 ON
SET LED3 ON
EOP
DEMO4
```



## ● SET PEEL

### Description

This setting is used to enable/disable the self-peeling function. The default setting for this function is off. When this function is set on, the printer stops after each label printing, and does not print the next label until the peeled label is taken away. This setting will be saved in printer memory when turning off the power.

### Syntax

SET PEEL ON/OFF

<u>Parameter</u>	<u>Description</u>
ON	Enable the self-peeling function
OFF	Disable the self-peeling function

### Example

```
REM ***SELF-PEELING FUNCTION ON***  
SIZE 4,4  
GAP 0,0  
DENSITY 8  
SPEED 6  
DIRECTION 0  
REFERENCE 0,0  
SET CUTTER OFF  
SET PEEL ON  
CLS  
TEXT 50,100,"3",0,1,1,"SELF-PEELING FUNCTION TEST"  
PRINT 5
```

### See Also

OFFEST, PRINT

## ● SET TEAR & SET STRIPER

### Description

This command is used to enable/disable feeding of labels to gap/black mark position for tearing off. This setting will be saved in printer memory when turning off the power.

### Syntax

SET TEAR ON/OFF        (TSPL2 language printers only)  
SET STRIPER ON/OFF      (TSPL language printers only)

<u>Parameter</u>	<u>Description</u>
ON	The label gap will stop at the tear off position after print.
OFF	The label gap will NOT stop at the tear off position after print. The beginning of label will be aligned to print head.

MODEL	SUPPORT	
	SET TEAR	SET STRIPER
LB-1000	X	X

### Example

```
REM ***TEAR FUNCTION ON***  
SIZE 3,3  
GAP 0.08,0  
DENSITY 8  
SPEED 4  
DIRECTION 0  
REFERENCE 0,0  
SET CUTTER OFF  
SET PEEL OFF  
SET TEAR ON  
CLS  
TEXT 50,100,"3",0,1,1,"TEAR FUNCTION TEST"  
PRINT 1
```

### See Also

SET PEEL, SET CUTTER

## ● SET GAP

### Description

This setting sets the gap sensor emission sensitivity. The printer initiates automatic gap sensor calibration when the PAUSE key is held down while powering up. This function may cease to work if the thickness of the backing paper and that of label with backing paper are not of appreciable difference to the sensor, or when there are pre-printed marks or patterns on the label. In such case, users must calibrate the gap sensor manually by this command through trial-and-error method to attain the proper setting. This setting will be saved in printer memory when turning off the power.

### Syntax

SET GAP n/AUTO/OFF/0,/REVERSE/OBVERSE

<u>Parameter</u>	<u>Description</u>
N	Gap sensor light emission strength. Available range is listed as below. 0 is the lowest sensitivity
AUTO	The printer will feed 2 or 3 labels to calibrate the gap. If the label is continuous, the printer will feed label to limit 10~20 inches to confirm if the label is continuous.
OFF	Disable the SET GAP AUTO function.
0,	Automatically calibrate the gap size.
REVERSE	This function is used when the Black Mark is the separation in the front of the label and which can't be detected by the Black Mark sensor. The parts of the media which can be passed through by GAP sensor are defined to be the printable area, otherwise it will be defined to the GAP of the media.
OBVERSE	Disable the "SET GAP REVERSE" function.

***Note: When in “SET HEAD OFF” mode, the function “SET GAP AUTO” doesn’t work even the printer head is opened and closed, but it can work when power on the printer.***

### Example

The example below is operated in DOS environment via the parallel port connection to setup the label size, gap distance and sensor sensitivity.

```
C:\>COPY CON LPT1<ENTER>
SIZE 4,2.5<ENTER>
GAP 0.12,0<ENTER>
SET GAP 1<ENTER>
<CTRL><Z><ENTER>
C:\>
```

***Note: <ENTER> stands for keyboard “ENTER” key. In the above example, please press “ENTER” key instead of typing <ENTER> in the above example. <CTRL> stands for keyboard “Ctrl” key.***

**Troubleshooting:**

Press the FEED key to test. Does printer stop at the same position on each label without error light blinking? If not, adjust the setting to a larger number. When adjusting this setting, begin from 0 and then on to higher values-incrementally.

**See Also**

[SIZE](#), [GAP](#), [BLINE](#)

## ● SET HEAD

### Description

This setting is used to enable/disable head open sensor. If the head open sensor is turned off, an open printer head will not return an error message. This setting will be saved in printer memory. This command is only available for BPL2 printers.

### Syntax

SET HEAD ON /OFF

<u>Parameter</u>	<u>Description</u>
ON	Turn on the “HEAD OPEN” sensor
OFF	Turn off the “HEAD OPEN” sensor

Model	Support
LB-1000	X

### Example

SET HEAD ON  
SET HEAD OFF

## ● SET RIBBON

### Description

This setting is used to enable/disable ribbon sensor detection. (Thermal Transfer Printing/Thermal Direct Printing) Printer will detect the presence of a ribbon to determine using either direct thermal or thermal transfer printing upon printer startup. This setting will NOT be saved in printer memory.

### Syntax

SET RIBBON ON /OFF

<u>Parameter</u>	<u>Description</u>
ON	Thermal transfer printing
OFF	Thermal direct printing

### Example

```
REM ***Direct printing****
SIZE 4,4
GAP 0,0
DENSITY 8
SPEED 6
DIRECTION 0
REFERENCE 0,0
SET CUTTER OFF
SET PEEL OFF
SET RIBBON OFF
CLS
BARCODE 100,100,"39",48,1,0,2,5,"CODE 39"
PRINT 1
```

## ● SET COM1

### Description

This setting defines communication parameters for printer serial port.

### Syntax

SET COM1 baud, parity, data, stop

<u>Parameter</u>	<u>Description</u>
baud	Baud rate, available baud rates are as listed : 24: 2400 bps 48: 4800 bps 96: 9600 bps 19: 19200 bps 38: 38400 bps 57: 57600 bps 115: 115200 bps
parity	Parity check N: No parity check E: Even parity check O: Odd parity check
Data	Data bit 8: 8 bits data 7: 7 bits data
stop	Stop bit 1: 1 stop bit 2: 2 stop bits

### Example

The parallel port is used to setup the printer serial port in this example via MS-DOS mode.

```
C:\>COPY CON LPT1<ENTER>
SET COM1 19,N,8,1<ENTER>
<CTRL><Z><ENTER>
C:\>
```

**Note:** <ENTER> stands for PC keyboard “ENTER” key. <CTRL><Z> means to hold PC keyboard “CTRL” key then press the PC keyboard <Z> key.

## ● SET PRINTKEY

### Description

This command will print one label and feed label gap to tear bar position for tearing away. Press FEED button to print the next label or batch of labels. If label content includes serial text or barcode, it will change the serial number accordingly. This setting will be saved in printer memory.

### Syntax

SET PRINTEKY OFF/ON/AUTO/<num>

<u>Parameter</u>	<u>Description</u>
OFF	Disable this function
ON	Enable this function
AUTO	Enable this function
<num>	Numbers of labels will be printed if FEED button is pressed.

This command is only available for TSPL2 printers.

Model	Support
LB-1000	X

### Example

Execute:  
SIZE 4,2.5  
GAP 0.12,0  
SET PRINTKEY ON  
SET COUNTER @0 1  
@0="0001"  
CLS  
TEXT 10,10,"5",0,1,1,@0  
PRINT 1

Execute:

Syntax	Receive “PRINT m”	Print Out
SET PRINTKEY ON or SET PRINTKEY AUTO	1.) PRINT 2	Label 1~2
	2.) Press FEED key	Label 3~4

Syntax	Receive “PRINT m,n”	Print Out
SET PRINTKEY ON or SET PRINTKEY AUTO	1.) PRINT 1,2	Label 1, Label 1
	2.) Press FEED key	Label 2, Label 2

Syntax	Receive “PRINT -1,n”	Print Out
SET PRINTKEY ON or SET PRINTKEY AUTO	1.) PRINT -1,2	Label 1, Label 1
	2.) Press FEED key	Label 1, Label 1

Syntax	Receive “PRINT m”	Print Out
SET PRINTKEY 5	1.) PRINT 2	Label 1~2
	2.) Press FEED key	Label 3~7
Syntax	Receive “PRINT m,n”	Print Out
SET PRINTKEY 5	1.) PRINT 1,2	Label 1, Label 1
	2.) Press FEED key	Label 2~6

Syntax	Receive “PRINT -1,n”	Print Out
SET PRINTKEY 5	1.) PRINT -1,2	Label 1, Label 1
	2.) Press FEED key	Label 1, Label 1

## ● SET REPRINT

### Description

This command will disable/enable a reprinting attempt subsequent to a "no paper", "no ribbon" or "carriage open" error.

### Syntax

SET REPRINT OFF/ON

<u>Parameter</u>	<u>Description</u>
OFF	Disable this function
ON	Enable this function

Model	Support
LB-1000	X

### Example

SET REPRINT ON

## ● PEEL

### Description

This command obtains the status of the peel-off sensor. This attribute is read only.

### Syntax

PEEL

<u>Return Value</u>	<u>Description</u>
0	Paper is not on top of peel sensor
1	Paper is on top of peel sensor

### Example

```
DOWNLOAD "DEMO.BAS"
SIZE 4,1
GAP 0,0
SPEED 4
DENSITY 8
SET PEEL OFF
SET KEY1 OFF
SET LED1 OFF
SET LED3 OFF
:START
LED1=0
LED3=0
    IF KEY1=1 THEN GOTO A
GOTO START
:A
    LED1=1
    CLS
    TEXT 10,10,"3",0,1,1,"PEEL Function Test!! "
    PRINT 1,1
:B
    LED1=0
    IF PEEL=1 THEN
        LED3=1
        GOTO B
    ELSE
        CLS
        TEXT 10,10,"3",0,1,1,"The label is removed from the PEEL sensor!!"
        PRINT 1,1
        GOTO START
    ENDIF
EOP
DEMO
```

## ● LED1, LED2, LED3

### Description

This command is used to control LED on/off. This attribute is write-only. Specify 1 to light on LED and 0 to turn off LED. Before using this command, be sure to cancel the default LED functions. Please refer to the SET LED command.

### Syntax

LED $m = n$

<u>Parameter</u>	<u>Description</u>
m	m=1, LED1 m=2, LED2 m=3, LED3
n	0: turn off LED 1: light on LED

Model	LED1	LED2	LED3	LED2 & LED3
LB-1000	GREEN	GREEN	RED	ORANGE

### Example

```
DOWNLOAD "DEMO.BAS"
SIZE 3,3
GAP 0.12,0
SPEED 4
DENSITY 8
DIRECTION 1
REFERENCE 0,0
SET CUTTER OFF
SET PEEL OFF
SET LED1 OFF
SET LED2 OFF
SET LED3 OFF
LED1=0
LED2=1
LED3=0
EOP
```

## ● KEY1, KEY2, KEY3

### Description

This command reads the status of KEY1 ,KEY2 and KEY3.

Model	KEY0	KEY1	KEY2	KEY3	KEY4	KEY5	KEY6
LB-1000		PAUSE	FEED				

### Syntax

KEY*m* = *n*

<u>Key</u>	<u>Return Value</u>
KEY1 (MENU)	0: released 1: pressed
KEY2 (PAUDE)	0: released 1: pressed
KEY3 (FEED)	0: released 1: pressed

### Example

```
DOWNLOAD "DEMO.BAS"
SIZE 3,1
GAP 0,0
SPEED 4
DENSITY 8
DIRECTION 1
REFERENCE 0,0
SET LED1 OFF
SET KEY1 OFF
LED1=0
:START
IF KEY1=1 THEN
    LED1=1
    CLS
    TEXT 100,10,"3",0,1,1,"KEY FUNCTION TEST"
    PRINT 1,1
ELSE
    LED1=0
ENDIF
GOTO START
EOP
DEMO
```

## Printer Global Variables

- **@LABEL**

### Description

This variable counts how many pieces of labels have been printed. This attribute cannot be initialized if the printer is reset, but will be retained if the printer power is turned off.

### Syntax

Write attribute: @LABEL=n or @LABEL="n"

Read attribute: A=LABEL or A\$=STR\$(LABEL)

<u>Parameter</u>	<u>Description</u>
n	Number of labels printed. 0<=n<=999999999

### Example

```
DOWNLOAD "DEMO.BAS"
SIZE 4,2,5
GAP 2 mm,0
SPEED 6
DENSITY 12
CLS
TEXT 10,50,"3",0,1,1,@LABEL
TEXT 10,100,"3",0,1,1,"@LABEL="+STR$(LABEL)
TEXT 10,150,"3",0,1,1,"*****Statement 1*****"
IF LABEL>1000 THEN
    TEXT 10,200,"3",0,1,1,"LABEL>1000"
ELSE
    TEXT 10,200,"3",0,1,1,"LABEL<1000"
ENDIF
TEXT 10,250,"3",0,1,1,"*****Statement 1*****"
A=LABEL
IF A>1000 THEN
    TEXT 10,300,"3",0,1,1,"A>1000"
ELSE
    TEXT 10,300,"3",0,1,1,"A<1000"
ENDIF
TEXT 10,350,"3",0,1,1,"*****Statement 3*****"
A$=STR$(LABEL)
IF VAL(A$)>1000 THEN
    TEXT 10,400,"3",0,1,1,"VAL(A$)>1000"
ELSE
    TEXT 10,400,"3",0,1,1,"VAL(A$)<1000"
ENDIF
PRINT 1,1
EOP
```

## ● YEAR

### Description

This variable reads/writes the year data via the Real Time Clock (RTC). Four-digit year formats are supported by RTC.

### Syntax

Write attribute: YEAR = 02  
Read attribute: A = YEAR  
Range: 00~50 = 2000~2050; 51~99 = 1951~1999

### Example

```
DOWNLOAD "SetYear.BAS"
REM *****Set Year Parameter to RTC*****
YEAR=05
EOP
SetYear

DOWNLOAD "DEMO.BAS"
SIZE 3,3
GAP 0.08,0
DENSITY 8
SPEED 4
DIRECTION 0
REFERENCE 0,0
SET CUTTER OFF
SET PEEL OFF
CLS

REM *****Read YEAR parameter form RTC*****
YEAR$=STR$(YEAR)
Y=YEAR

REM *****Print*****
TEXT 10,10,"5",0,1,1,"YEAR1="+YEAR$
TEXT 10,110,"5",0,1,1,"YEAR2="+STR$(Y)
TEXT 10,210,"5",0,1,1,"YEAR3="+STR$(YEAR)
PRINT 1
EOP
DEMO
```

### See Also

~!C, MONTH, DATE, DAY, HOUR, MINUTE, SECOND

## ● MONTH

### Description

This variable reads/writes the month data via the Real Time Clock (RTC). Two-digit (01~12) month formats are supported by RTC.

### Syntax

Write attribute: MONTH = 01

Read attribute: A = MONTH

Range: 01~12

### Example

```
DOWNLOAD "SetMonth.BAS"
REM *****Set Month Parameter to RTC*****
MONTH=05
EOP
SetMonth
```

```
DOWNLOAD "DEMO.BAS"
SIZE 3,3
GAP 0.08,0
DENSITY 8
SPEED 4
DIRECTION 0
REFERENCE 0,0
SET CUTTER OFF
SET PEEL OFF
CLS
```

```
REM *****Read Month parameter form RTC*****
MONTH$=STR$(MONTH)
M=MONTH

REM *****Print*****
TEXT 10,10,"5",0,1,1,"MONTH1="+MONTH$
TEXT 10,110,"5",0,1,1,"MONTH2="+STR$(M)
TEXT 10,210,"5",0,1,1,"MONTH3="+STR$(MONTH)
PRINT 1
EOP
DEMO
```

### See Also

~!C, MONTH, DATE, DAY, HOUR, MINUTE, SECOND

## ● DATE

### Description

This variable reads/writes the date data via the Real Time Clock (RTC). Two-digit (01~31) date formats are supported by RTC.

### Syntax

Write attribute: DATE = 12

Read attribute: A = DATE

Range: 01~31

### Example

```
DOWNLOAD "SetDate.BAS"
REM *****Set Date Parameter to RTC*****
DATE=30
EOP
SetDate
```

```
DOWNLOAD "DEMO.BAS"
SIZE 3,3
GAP 0.08,0
DENSITY 8
SPEED 4
DIRECTION 0
REFERENCE 0,0
SET CUTTER OFF
SET PEEL OFF
CLS
```

```
REM *****Read Date parameter form RTC*****
DATE$=STR$(DATE)
D=DATE
```

```
REM *****Print*****
TEXT 10,10,"5",0,1,1,"DATE1="+DATE$
TEXT 10,110,"5",0,1,1,"DATE2="+STR$(D)
TEXT 10,210,"5",0,1,1,"DATE3="+STR$(DATE)
PRINT 1
EOP
DEMO
```

### See Also

~!C, MONTH, DATE, DAY, HOUR, MINUTE, SECOND

## ● WEEK

### Description

This variable reads/writes the day of the week data via the Real Time Clock (RTC), which is represented by one single digit (1~7).

### Syntax

Write attribute: WEEK = 3

Read attribute: A = WEEK

Range: 1(Sunday)~7(Saturday)

### Example

```
DOWNLOAD "SetWeek.BAS"
REM *****Set Week Parameter to RTC*****
WEEK=6
EOP
SetWeek
```

```
DOWNLOAD "DEMO.BAS"
SIZE 3,3
GAP 0.08,0
DENSITY 8
SPEED 4
DIRECTION 0
REFERENCE 0,0
SET CUTTER OFF
SET PEEL OFF
CLS
```

```
REM *****Read Week parameter form RTC*****
WEEK$=STR$(WEEK)
W=WEEK
```

```
REM *****Print*****
TEXT 10,10,"5",0,1,1,"WEEK1="+WEEK$
TEXT 10,110,"5",0,1,1,"WEEK2="+STR$(W)
TEXT 10,210,"5",0,1,1,"WEEK3="+STR$(WEEK)
PRINT 1
EOP
DEMO
```

### See Also

~!C, MONTH, DATE, DAY, HOUR, MINUTE, SECOND

## ● HOUR

### Description

This variable reads/writes the hour data via the Real Time Clock (RTC). The 24-hour-day system (00~23) is supported by RTC.

### Syntax

Write attribute: HOUR = 12

Read attribute: A = HOUR

Range: 00~23

### Example

```
DOWNLOAD "SetHour.BAS"
REM *****Set Hour Parameter to RTC*****
HOUR=11
EOP
SetHour
```

```
DOWNLOAD "DEMO.BAS"
SIZE 3,3
GAP 0.08,0
DENSITY 8
SPEED 4
DIRECTION 0
REFERENCE 0,0
SET CUTTER OFF
SET PEEL OFF
CLS
```

```
REM *****Read Hour parameter form RTC*****
HOUR$=STR$(HOUR)
H=HOUR

REM *****Print*****
TEXT 10,10,"5",0,1,1,"HOUR1="+HOUR$
TEXT 10,110,"5",0,1,1,"HOUR2="+STR$(H)
TEXT 10,210,"5",0,1,1,"HOUR3="+STR$(HOUR)
PRINT 1
EOP
DEMO
```

### See Also

~!C, MONTH, DATE, DAY, HOUR, MINUTE, SECOND

## ● MINUTE

### Description

This variable reads/writes the minute data via the Real Time Clock (RTC). Two-digits (00~59) minute format is supported by RTC.

### Syntax

Write attribute: MINUTE = 12

Read attribute: A = MINUTE

Range: 00~59

### Example

```
DOWNLOAD "SetMinute.BAS"
REM *****Set Minute Parameter to RTC*****
MINUTE=59
EOP
SetMinute
```

```
DOWNLOAD "DEMO.BAS"
SIZE 3,3
GAP 0.08,0
DENSITY 8
SPEED 4
DIRECTION 0
REFERENCE 0,0
SET CUTTER OFF
SET PEEL OFF
CLS
```

```
REM *****Read Minute parameter form RTC*****
MINUTE$=STR$(MINUTE)
MIN=MINUTE

REM *****Print*****
TEXT 10,10,"5",0,1,1,"MINUTE1="+MINUTES$
TEXT 10,110,"5",0,1,1,"MINUTE2="+STR$(MIN)
TEXT 10,210,"5",0,1,1,"MINUTE3="+STR$(MINUTE)
PRINT 1
EOP
DEMO
```

### See Also

~!C, MONTH, DATE, DAY, HOUR, MINUTE, SECOND

## ● SECOND

### Description

This variable reads/writes the second data via the Real Time Clock (RTC). Two-digits (00~59) second format is supported by RTC.

### Syntax

Write attribute: SECOND = 12

Read attribute: A = SECOND

Range: 00~59

### Example

```
DOWNLOAD "SetSecond.BAS"
REM *****Set Second Parameter to RTC*****
SECOND=59
EOP
SetSecond

DOWNLOAD "DEMO.BAS"
SIZE 3,3
GAP 0.08,0
DENSITY 8
SPEED 4
DIRECTION 0
REFERENCE 0,0
SET CUTTER OFF
SET PEEL OFF
CLS

REM *****Read Second parameter form RTC*****
SECOND$=STR$(SECOND)
SEC=SECOND

REM *****Print*****
TEXT 10,10,"5",0,1,1,"SECOND1="+SECOND$
TEXT 10,110,"5",0,1,1,"SECOND2="+STR$(SEC)
TEXT 10,210,"5",0,1,1,"SECOND3="+STR$(SECOND)
PRINT 1
EOP
DEMO
```

### See Also

~!C, MONTH, DATE, DAY, HOUR, MINUTE, SECOND

## ● @YEAR

### Description

This variable reads/writes the year data via the Real Time Clock (RTC). Two-digit year formats are supported by RTC. @YEAR global variable can be accessed directly without using BASIC language functions.

### Syntax

Write attribute: @YEAR = "01"

Read attribute: @YEAR

Range: 00~99

Model	Support
LB-1000	X

### Example

```
REM *****Set @YEAR*****
@YEAR="05"

REM *****Print*****
SIZE 3,3
GAP 0.08,0
DENSITY 8
SPEED 6
DIRECTION 0
REFERENCE 0,0
SET CUTTER OFF
SET PEEL OFF
CLS
TEXT 10,10,"5",0,1,1,"@YEAR"
TEXT 310,10,"5",0,1,1,@YEAR
PRINT 1
```

### See Also

~!C, @MONTH, @DATE, @DAY, @HOUR, @MINUTE, @SECOND

## ● @MONTH

### Description

This variable reads/writes the month data via the Real Time Clock (RTC). Two-digits (01~12) month formats are supported by RTC. @MONTH global variable can be accessed directly without using BASIC language functions.

### Syntax

Write attribute: @MONTH = "01"

Read attribute: @MONTH

Range: 01~12

Model	Support
LB-1000	X

### Example

```
REM *****Set @MONTH*****
@MONTH="12"
```

```
REM *****Print*****
SIZE 3,3
GAP 0.08,0
DENSITY 8
SPEED 6
DIRECTION 0
REFERENCE 0,0
SET CUTTER OFF
SET PEEL OFF
CLS
TEXT 10,10,"5",0,1,1,"@MONTH"
TEXT 310,10,"5",0,1,1,@MONTH
PRINT 1
```

### See Also

~!C, @YEAR, @DATE, @DAY, @HOUR, @MINUTE, @SECOND

## ● @DATE

### Description

This variable reads/writes the date data via the Real Time Clock (RTC). Two-digits (01~31) date formats are supported by RTC. @DATE global variable can be accessed directly without using BASIC language functions.

### Syntax

Write attribute: @DATE = "12"

Read attribute: @DATE

Range: 01~31

Model	Support
LB-1000	X

### Example

```
REM *****Set @DATE*****
@DATE="31"

REM *****Print*****
SIZE 3,3
GAP 0.08,0
DENSITY 8
SPEED 6
DIRECTION 0
REFERENCE 0,0
SET CUTTER OFF
SET PEEL OFF
CLS
TEXT 10,10,"5",0,1,1,"@DATE"
TEXT 310,10,"5",0,1,1,@DATE
PRINT 1
```

### See Also

~!C, @YEAR, @MONTH, @DAY, @HOUR, @MINUTE, @SECOND

## ● @DAY

### Description

This variable reads/writes the day of the week data via the Real Time Clock (RTC), which is represented by one single digit (1~7). @DAY global variable can be accessed directly without using BASIC language functions.

### Syntax

Write attribute: @DAY = "3"

Read attribute: @DAY

Range: 1(Sunday)~7(Saturday)

Model	Support
LB-1000	X

### Example

```
REM *****Set @DAY*****
@DAY="5"

REM *****Print*****
SIZE 3,3
GAP 0.08,0
DENSITY 8
SPEED 6
DIRECTION 0
REFERENCE 0,0
SET CUTTER OFF
SET PEEL OFF
CLS
TEXT 10,10,"5",0,1,1,"@DAY"
TEXT 310,10,"5",0,1,1,@DAY
PRINT 1
```

### See Also

~!C, @YEAR, @MONTH, @DATE, @HOUR, @MINUTE, @SECOND

## ● @HOUR

### Description

This variable reads/writes the hour data via the Real Time Clock (RTC). The 24-hour-day system (00~23) is supported by RTC. @HOUR global variable can be accessed directly without using BASIC language functions.

### Syntax

Write attribute: @HOUR = "12"

Read attribute: @HOUR

Range: 00~23

Model	Support
LB-1000	X

### Example

```
REM *****Set @HOUR*****
@HOUR="23"
```

```
REM *****Print*****
SIZE 3,3
GAP 0.08,0
DENSITY 8
SPEED 6
DIRECTION 0
REFERENCE 0,0
SET CUTTER OFF
SET PEEL OFF
CLS
TEXT 10,10,"5",0,1,1,"@HOUR"
TEXT 310,10,"5",0,1,1,@HOUR
PRINT 1
```

### See Also

~!C, @YEAR, @MONTH, @DATE, @DAY, @MINUTE, @SECOND

## ● @MINUTE

### Description

This variable reads/writes the minute data via the Real Time Clock (RTC). The two-digits (00~59) minute format is supported by RTC. @MINUTE global variable can be accessed directly without using BASIC language functions.

### Syntax

Write attribute: @MINUTE = "12"

Read attribute: @MINUTE

Range: 00~59

Model	Support
LB-1000	X

### Example

```
REM *****Set @MINUTE*****
@MINUTE="59"
```

```
REM *****Print*****
SIZE 3,3
GAP 0.08,0
DENSITY 8
SPEED 6
DIRECTION 0
REFERENCE 0,0
SET CUTTER OFF
SET PEEL OFF
CLS
TEXT 10,10,"5",0,1,1,"@MINUTE"
TEXT 310,10,"5",0,1,1,@MINUTE
PRINT 1
```

### See Also

~!C, @YEAR, @MONTH, @DATE, @DAY, @HOUR, @SECOND

## ● @SECOND

### Description

This variable reads/writes the second data via the Real Time Clock (RTC). The Two-digit (00~59) second format is supported by RTC. @SECOND global variable can be accessed directly without using BASIC language functions.

### Syntax

Write attribute: @SECOND = "12"

Read attribute: @SECOND

Range: 00~59

Model	Support
LB-1000	X

### Example

```
REM *****Set @SECOND*****
```

```
@SECOND = "59"
```

```
REM *****Print*****
```

```
SIZE 3,3
```

```
GAP 0,0
```

```
DENSITY 8
```

```
SPEED 6
```

```
DIRECTION 0
```

```
REFERENCE 0,0
```

```
SET CUTTER OFF
```

```
SET PEEL OFF
```

```
CLS
```

```
TEXT 10,10,"5",0,1,1,"@SECOND"
```

```
TEXT 310,10,"5",0,1,1,@SECOND
```

```
PRINT 1
```

### See Also

[~!C](#), [@YEAR](#), [@MONTH](#), [@DATE](#), [@DAY](#), [@HOUR](#), [@MINUTE](#)

**Programming Manual**  
**Label Printer**

**LB-1000**



**bematech.com**